
Application Bucket Dredging

PDS2000

Version 1.0.2

June 2010



RESON B.V.
Stuttgartstraat 42- 44
3047 AS Rotterdam
The Netherlands

Tel.: +31 (0)10 245 15 00
www.reson.nl

Amendment Record Sheet

Rev.	Date	Reason for Modifications
1.0.2	10/06/2010	New RESON logo added.
1.0.1	15/03/2010	Small modification
1.0.0	04/03/2010	First version of the Bucket Dredging Manual.

Contents

1 Introduction	1
1.1 Bucket Dredging	1
2 Quick Setup Project	3
2.1 Introduction	3
2.2 Vessel Configuration	3
2.2.1 Geometry	3
2.2.2 Equipment	5
2.2.2.1 Dredge Positioning System (Bucket)	6
2.2.2.2 Positioning System Geogs	8
2.2.2.3 Compass	8
2.2.2.4 VRU	8
2.2.2.5 Depth Sensor	8
2.2.2.6 Tide Gauge	9
2.2.3 Computations	9
2.2.4 Data Source	9
2.2.5 Guidance	10
2.2.6 Logging	10
2.3 Acquisition	11
2.3.1 Plan View – General Dredge Operation	12
2.3.1.1 Plan View Properties	13
2.3.1.2 Coverage Settings	14
2.3.2 Profile – Realtime Design View	15
2.3.2.1 Profile Properties	17
3 Calibration	19
3.1 Introduction	19
3.2 Calibration Inclinator	19
4 Vessel Configuration	21
4.1 Introduction	21
4.2 Vessel Configuration	22
4.2.1 Geometry Page	22
4.2.1.1 Vessel Contour	22
4.2.1.2 Offsets	25
4.2.2 Equipment Page	25

4.2.2.1 Dredge Positioning System (Bucket)	26
4.2.2.2 Positioning System Geogs.....	30
4.2.2.3 Compass	32
4.2.2.4 VRU.....	33
4.2.2.5 Depth Sensor	33
4.2.2.6 Tide Gauge	35
4.2.3 Computations Page	35
4.2.4 Data Source Page	37
4.2.5 Guidance Page.....	38
4.2.6 Logging Page	38
5 Acquisition	41
5.1 Introduction	41
5.2 Plan View – General Dredge Operation.....	43
5.2.1 Plan View Toolbar and Context Menu.....	43
5.2.2 Plan View Properties	46
5.2.3 Plan View Layer Control.....	48
5.2.4 Coverage Settings	49
5.3 Profile – Realtime Design View.....	50
5.3.1 Profile Toolbar and Context Menu.....	51
5.3.2 Profile Properties	52
5.3.3 Profile Layer Control.....	54

Figures

Figure 2-1	Example of a right view of a bucket chain.....	4
Figure 2-2	Example of a top view of a bucket chain.....	4
Figure 2-3	Drawing of the bucket chain with the origin (0,0,0)	5
Figure 2-4	Equipment page	6
Figure 2-5	First properties window of the Dredge Positioning System (Bucket)	6
Figure 2-6	Drawing of the bucket chain	7
Figure 2-7	Data Source page with the depth sensor as primary data group	9
Figure 2-8	Design Model tab in the Guidance page	10
Figure 2-9	Logging page with PDS2000 Grid Model	10
Figure 2-10	Example of a layout in the Acquisition.....	11
Figure 2-11	Plan View – General Dredge Operation view with orientation mode ‘Heading Up’	12
Figure 2-12	The Properties of the Plan View – General Dredge Operation view	13
Figure 2-13	Coverage Settings for the plan view.....	14
Figure 2-14	Profile – Realtime Design view with a right view of the bucket chain, grid model and design model	15
Figure 2-15	Select Source Item for the Up-Down Indicator	16
Figure 2-16	Properties of the Profile – Realtime Design view	17
Figure 3-1	Bucket chain for the calibration of the inclinometer.....	19
Figure 4-1	Configuration window	21
Figure 4-2	Geometry page of the vessel configuration.....	22
Figure 4-3	Example of a top view of a vessel	23
Figure 4-4	Example of a right view of a bucket chain.....	23
Figure 4-5	Drawing of the bucket chain with the origin (0,0,0)	24
Figure 4-6	Equipment page	25
Figure 4-7	First properties window of the Dredge Positioning System (Bucket)	26
Figure 4-8	Drawing of the bucket chain	27
Figure 4-9	Second properties window of the Dredge Positioning System (Bucket)	28
Figure 4-10	Third properties window of the Dredge Positioning System (Bucket)	29
Figure 4-11	First properties window of the Positioning System Geogs	30
Figure 4-12	Third properties window of the Positioning System Geogs.....	31
Figure 4-13	First properties window of the Compass	32
Figure 4-14	First properties window of the VRU.....	33
Figure 4-15	First properties window of the Depth sensor.....	34
Figure 4-16	Second properties window of the Depth sensor.....	34
Figure 4-17	Properties window of the Tide gauge	35
Figure 4-18	Advanced Computations with a tide computation	36
Figure 4-19	Properties window of the Tide computation	36

Figure 4-20	Data Source page with the depth sensor as primary data group	37
Figure 4-21	Design Model tab in the Guidance page.....	38
Figure 4-22	Logging page with PDS2000 Grid Model.....	39
Figure 4-23	Select the device data for the grid model logging.....	39
Figure 5-1	Example of a layout in the Acquisition	42
Figure 5-2	Plan View – General Dredge Operation view with orientation mode ‘Heading Up’	43
Figure 5-3	Measure window in the plan views	44
Figure 5-4	Measure Relative window	44
Figure 5-5	Find C-Map object in the plan view.....	45
Figure 5-6	The Properties of the Plan View – General Dredge Operation view	46
Figure 5-7	Layer Control of the Plan View – General Dredge Operation.....	48
Figure 5-8	Coverage Settings	49
Figure 5-9	Profile – Realtime Design view with a right view of the bucket chain, grid model and design model.....	50
Figure 5-10	Select Source Item for the Up-Down Indicator	51
Figure 5-11	Properties of the Profile – Realtime Design view.....	52
Figure 5-12	Layer Control of the Profile – Realtime Design view	54

1 Introduction

1.1 Bucket Dredging

The application type 'Bucket Dredging' is for a project where for dredging a bucket dredger is used.

In the first chapter of this application manual a brief explanation of the setup of a bucket dredging project will be discussed. At the end of this chapter some extra information about the views in the Acquisition will be given. This chapter can be used by experienced PDS2000 users.

The next chapter will discuss the calibration of the inclinometer on the bucket chain.

The last two chapters will explain in more detail the setup of the project and the Acquisition.

This manual has to be used in conjunction with the PDS2000 User Manual.

This manual is also available as a HTML Help file. Press F1 or select *Help > Help Topics* to open the PDS2000 help files.

2 Quick Setup Project

2.1 Introduction

PDS2000 needs a project, an application type and a configuration before any of the modules can be started.

In the chapter 'Starting PDS2000' of the PDS2000 User Manual is described how to setup a project with an application type and a configuration.

For the new project the application type should be 'Bucket Dredging'.



In this chapter the Vessel Configuration and the Acquisition will be explained in a way that an experienced PDS2000 user can setup and run a bucket dredging project. For a detailed explanation of the setup see the chapters 'Vessel Configuration' (on page 21) and 'Acquisition' (on page 41).

2.2 Vessel Configuration

The general information about the Vessel Configuration is explained in the chapter 'Vessel Configuration' of the PDS2000 User Manual.

2.2.1 Geometry

In the Geometry page the contours of the vessel and the bucket chain has to be drawn. For the contours a top view and at least one side view have to be drawn. The side views of all the contours should be from the same side, so the vessel with the bucket chain can be displayed in a Profile – Realtime Design view in the Acquisition (see page 15).

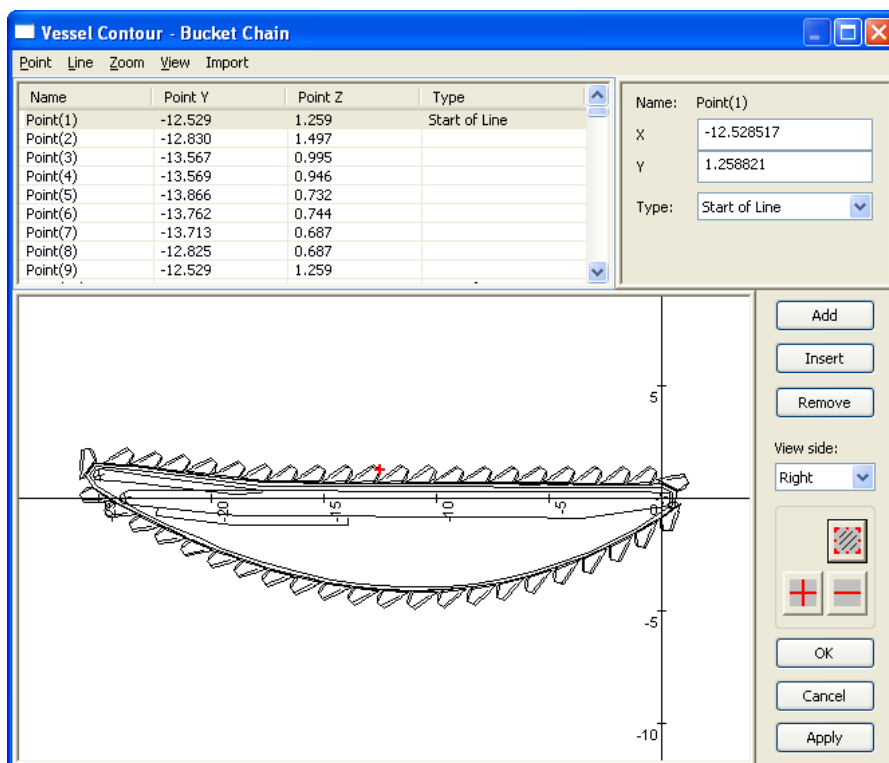


Figure 2-1 Example of a right view of a bucket chain

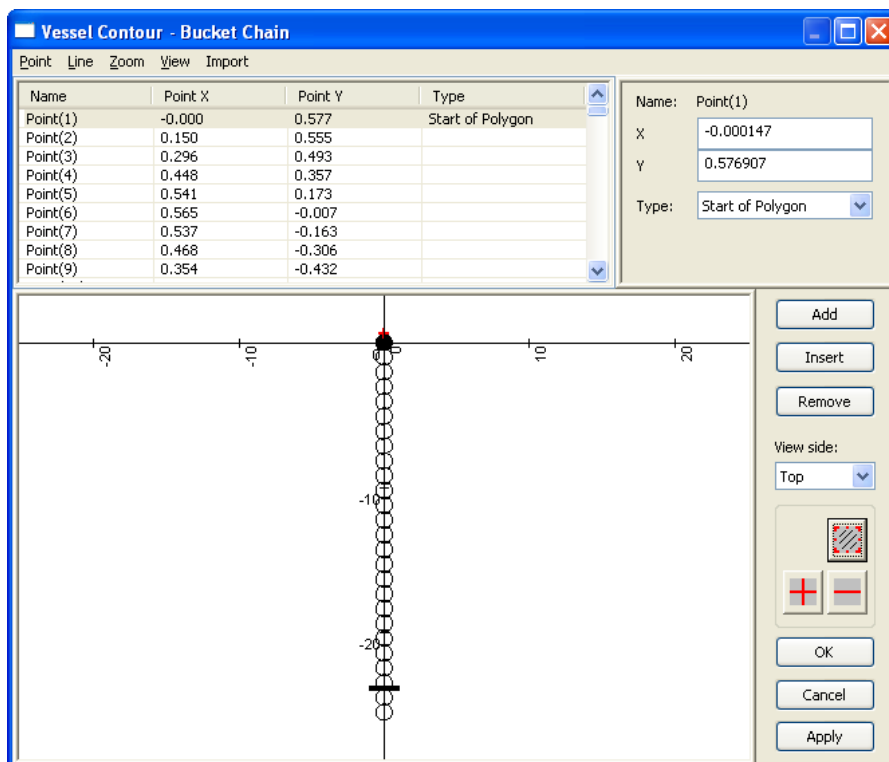


Figure 2-2 Example of a top view of a bucket chain

The origin (0,0,0) of the drawing for a bucket chain should be in the centre of the bottom bucket chain wheel. The negative Y-axis has to go through the bucket chain point (see below).

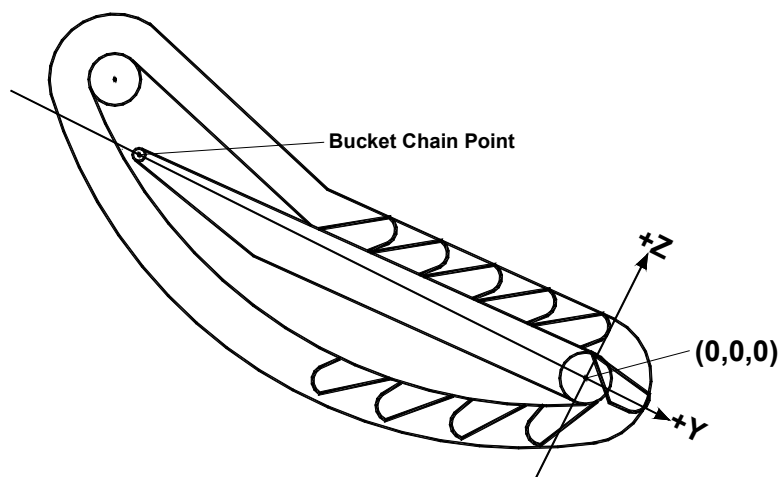


Figure 2-3 Drawing of the bucket chain with the origin (0,0,0)

The offsets, which are needed for the bucket dredging, have to be added to the offset table in the Geometry page. The possible vessel offsets are:

- Antenna of a Positioning System Geogs
- Bucket Chain Point
- Top Bucket Chain Wheel
- VRU
- Depth Sensor

The Zero offset is the zero point of the vessel.

See page 7 for a drawing of the bucket chain with the bucket chain point and the top bucket chain wheel.

2.2.2 Equipment

In the Equipment page the sensors used for the bucket dredging are:

- Dredge Positioning System (Bucket)
- Positioning System Geogs
- Compass
- VRU

If no RTK system is used as positioning system then the following equipment is needed:

- Depth Sensor
- Tide gauge(s)

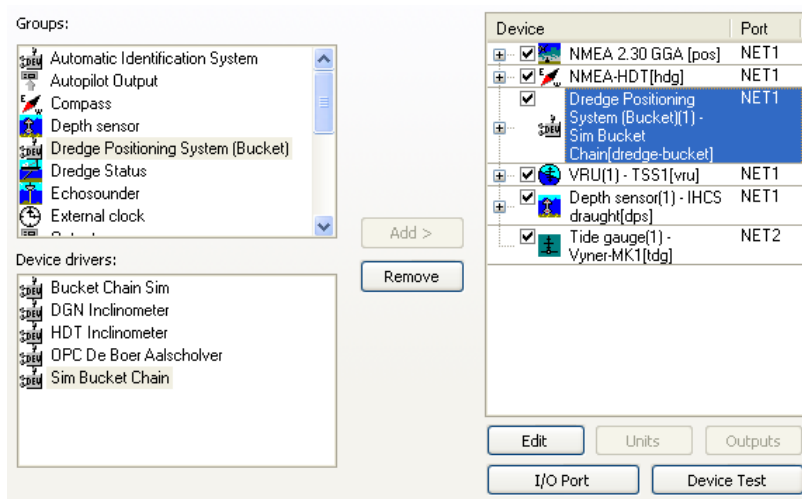


Figure 2-4 Equipment page



For most of the items in the properties the default settings can be used. Below only the essential settings in the properties of the sensors will be discussed.

2.2.2.1 Dredge Positioning System (Bucket)

This device driver calculates the position and the depth of the lowest point of the bucket chain with the data from the inclinometer on the ladder.

The first properties window (' Dredge Positioning System (Bucket)'):

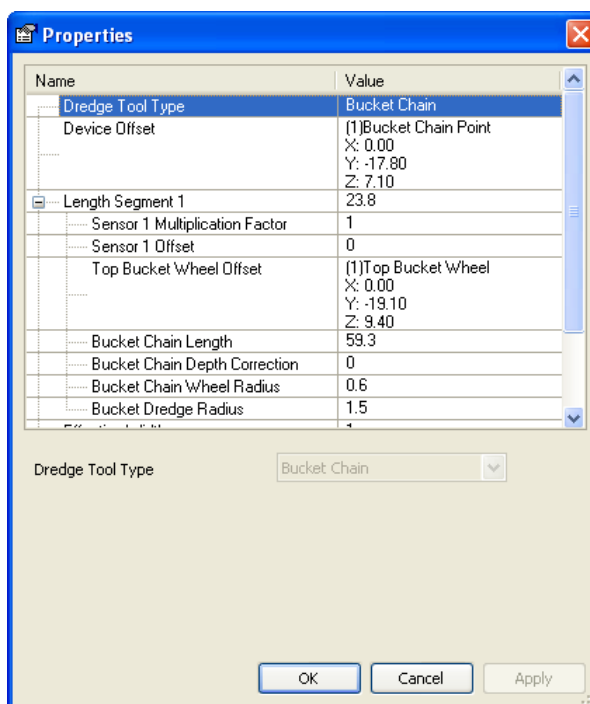


Figure 2-5 First properties window of the Dredge Positioning System (Bucket)

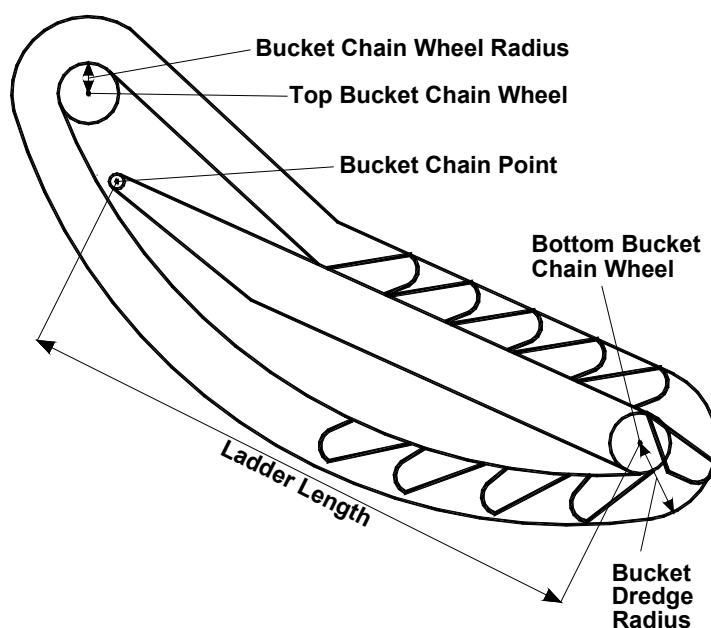


Figure 2-6 Drawing of the bucket chain

Device Offset

The offset of the bucket chain point as defined in the Geometry page.

Length Segment 1

The ladder length in meters.

Sensor 1 Multiplication Factor

The multiplication factor for the inclinometer reading.

Sensor 1 Offset

The offset for the inclinometer reading. The offset can be calculated with the calibration of the inclinometer (see page 19).

Top Bucket Wheel Offset

The offset of the top bucket chain wheel as defined in the Geometry page.

Bucket Chain Length

The total bucket chain length. The length can be obtained by measure the length over 5 buckets with a tape measure and divide the observation by 5, then multiply this by the number of buckets on the chain.

Bucket Chain Depth Correction

The dredge depth can be corrected with this correction; a positive correction will make the dredge depth deeper.

Bucket Chain Wheel Radius

The radius of the top or bottom bucket chain wheel.

Bucket Dredge Radius



The distance from the centre of the bottom bucket chain wheel to the edge of the bucket when it passed the bottom bucket chain wheel.

Effective Width

The width of the bucket.

Dredge Head Shape

Select the contour file for the bucket chain that is made in the Geometry page.

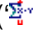In the second and third properties window (' Drag-head Relative Position' and ' Drag-head Absolute Position') the defaults settings can be used.




In the third properties window the option 'Grid Model Update Mode' is set on *Set Z Value* to give the best update of the active grid model.

2.2.2.2 Positioning System Geogs




If this system is not a RTK system then a depth sensor and one or more tide gauges have to be interfaced (see page 8).

In the first properties window (' Positioning System Geogs):

Device Offset

The offset of the GPS antenna as defined in the Geometry page.

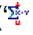In the third properties window (' Reference Point Computation'):

Height Source

Select for the computation of the height related to the received position the Z of the GPS RTK system or the tidal information from tide gauges or predicted tides.

2.2.2.3 Compass

The compass is used to get a heading of the vessel.


In the first properties window (' Compass'):

Heading Correction

The correction as derived from the compass calibration.

2.2.2.4 VRU

A VRU is used to measure the attitude (roll, pitch) and heave) of the vessel.

The first properties window (' VRU'):

Device Offset

The offset of the motion sensor as defined in the Geometry page.

Heading Correction

If the VRU is not aligned with the vessel, enter the misalignment of the VRU.

Roll / Pitch Correction

A roll and pitch correction, derived from the VRU calibration, can be entered in the properties. Check the sign convention of the roll and pitch before entering the values.

2.2.2.5 Depth Sensor

When the positioning system is not a RTK system a depth sensor is used to measure the draught of the vessel.

The first properties window (' Depth sensor'):

Device Offset

The offset of the depth sensor as defined in the Geometry.

When a depth sensor is used the sensor has to be set as primary data group for the sea level data source in the Data Source (see page 9)

2.2.2.6 Tide Gauge

When the positioning system is not a RTK system one or more tide gauges are used to measure tide information to calculate the absolute depth.

The properties window (Tide gauge):

Tide Stations

Select one or more tide stations that will be used to calculate the tide correction.

2.2.3 Computations

A ' Tide Computation' has to be created in the Advanced Computations (click on Advanced... to open the advanced computations). The tide computation is needed to compute the tidal correction.

Tide Reduction Computation Mode

When one tide station is used, select the mode *Single Tide Station*. When more tide stations are used, select the mode *Multiple Tide Stations* or when the tide stations are along a route the mode *Tide Stations Along Route*.

Tide Stations

Select the tide station(s) that will be used for the tide computation.

2.2.4 Data Source

In the Data Source page the sea level data source will have two data groups when a depth sensor is used.

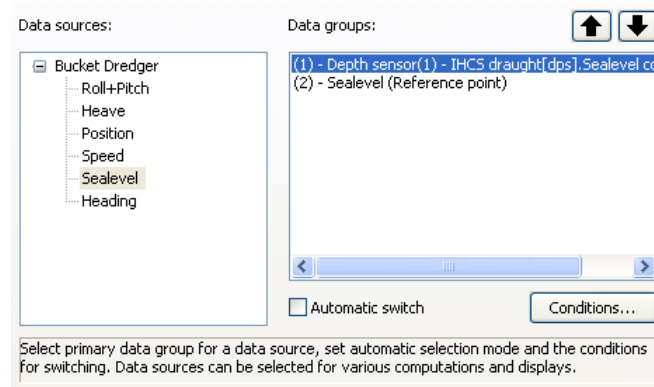


Figure 2-7 Data Source page with the depth sensor as primary data group

By default the data group 'Sealevel (Reference point)' will be the primary data group. To use the depth sensor for calculating the sea level the depth sensor has to be the primary data source.

Select the depth sensor and click on  to move the depth sensor to the top.

2.2.5 Guidance

Select a design model that will be used as reference for the bucket dredging. This can be a 3D design model or a grid model.

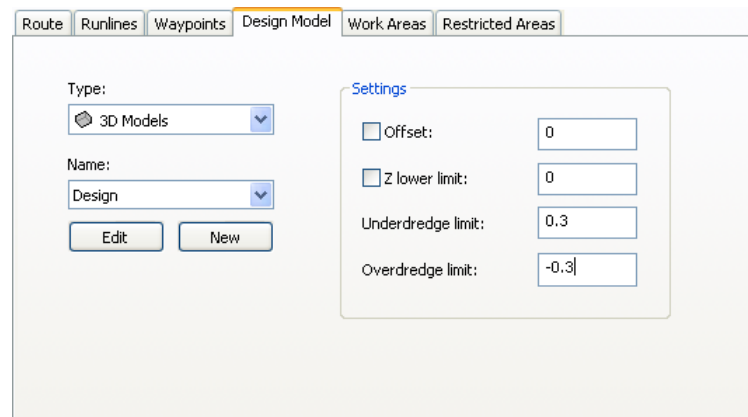


Figure 2-8 Design Model tab in the Guidance page

The underdredge and overdredge limits are displayed as extra lines in the Profile – Realtime Design view (see page 15).

2.2.6 Logging

A grid model of the dredge location with the actual depths should be created. Select in the logging page this grid model, so that during the bucket dredging the grid model can be updated with actual dredge depths.

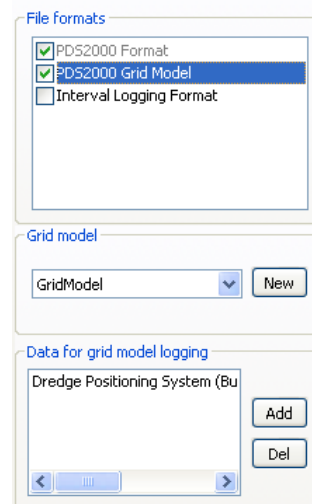


Figure 2-9 Logging page with PDS2000 Grid Model

2.3 Acquisition

In the Acquisition several views can be created to display the relevant information for the bucket dredger. The minimum should be a Plan View where the bucket dredger with the bucket chain is visible and one or more Profile views for a side or back view of the bucket dredger with the bucket chain.

See for other views, which can be used in the Acquisition, the chapter 'Views' in the PDS2000 User Manual.

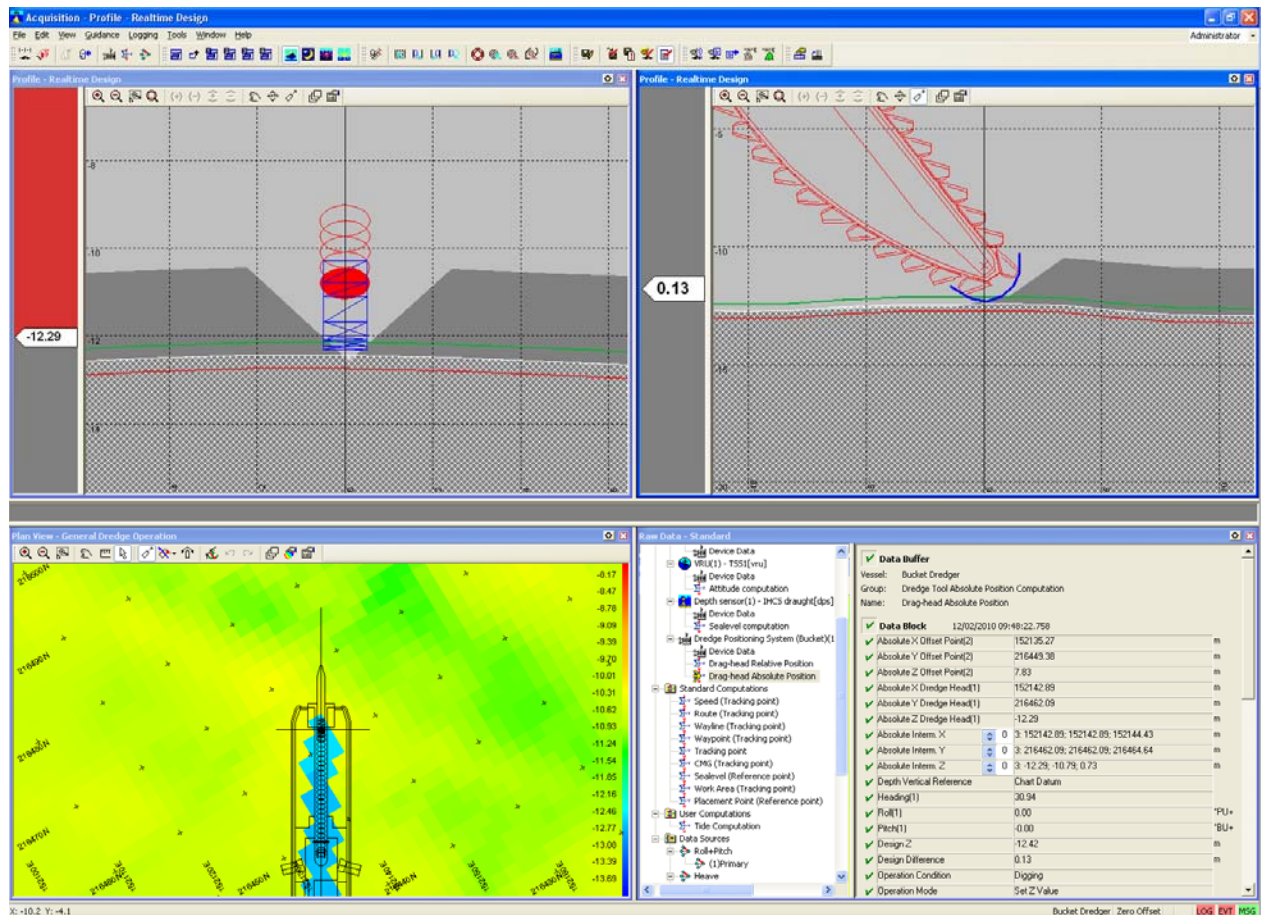


Figure 2-10 Example of a layout in the Acquisition

2.3.1 Plan View – General Dredge Operation

This plan view will show the bucket dredger with the bucket chain in a top view with additional information.

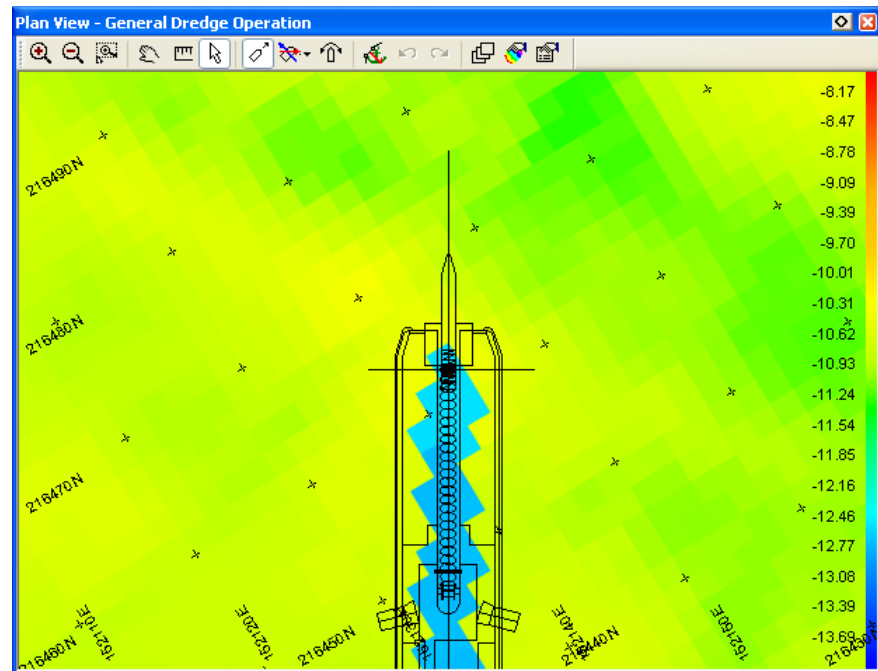




Figure 2-11 Plan View – General Dredge Operation view with orientation mode 'Heading Up'


When no color table can be selected, then a color table has to be created in the Explorer before it can be selected (see for information the PDS2000 User Manual).




When this plan view is created, automatically the grid model and the dredge layer with the bucket dredger information are loaded. Only the active grid model will be shown in black, because there is no color table selected for the grid model. Click on  in the toolbar or select 'Coverage Setting' in the context menu of the plan view to open the Coverage Settings and select the right color table for the Z Average of the grid model (see page 14).

Set the view in the Follow Vessel mode when the vessel is not displayed in the plan view. Click on  in the toolbar to set the Follow Vessel mode on.

2.3.1.1 Plan View Properties

Click on  in the toolbar or select 'Properties' in the context menu to open the Properties of the plan view.

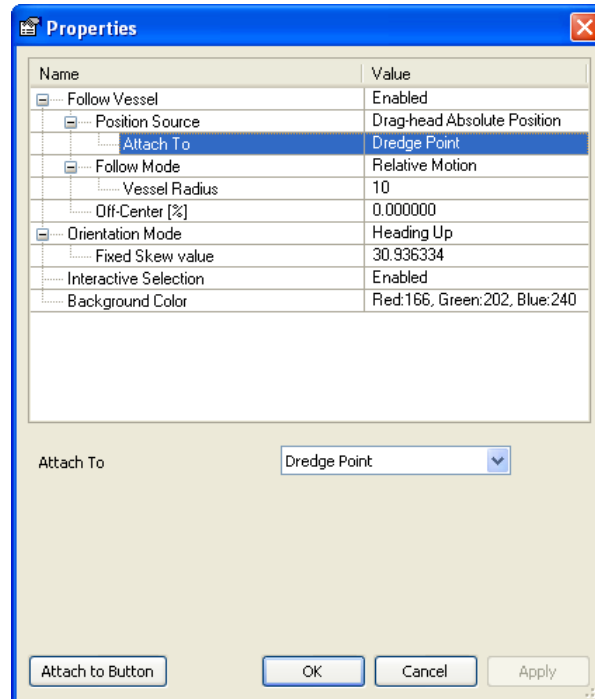

The Properties dialog box for the Plan View is shown. It contains a table with the following data:


Name	Value
Follow Vessel	Enabled
Position Source	Drag-head Absolute Position
Attach To	Dredge Point
Follow Mode	Relative Motion
Vessel Radius	10
Off-Center [%]	0.000000
Orientation Mode	Heading Up
Fixed Skew value	30.936334
Interactive Selection	Enabled
Background Color	Red:166, Green:202, Blue:240

Below the table, there is a section labeled 'Attach To' with a dropdown menu currently set to 'Dredge Point'. At the bottom of the dialog are buttons for 'Attach to Button', 'OK', 'Cancel', and 'Apply'.

Figure 2-12 The Properties of the Plan View – General Dredge Operation view

By default the item 'Position Source' is set on the *Tracking Point*. If the bottom of the bucket chain has to be followed, select for the 'Position Source' the *Drag-head Absolute Position*. For the item 'Attach To' can then the *Dredge Point* be selected.

2.3.1.2 Coverage Settings

Click on  in the plan view toolbar or select 'Coverage Settings' in the context menu of the plan view to open the Coverage Settings.

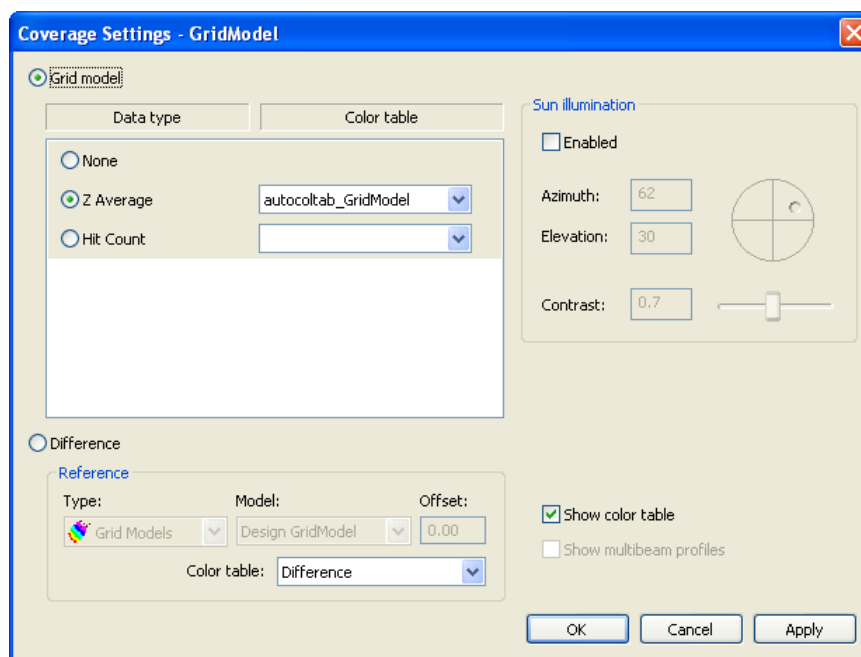


Figure 2-13 Coverage Settings for the plan view

If a grid model has to be shown in the plan view, check the option 'Grid model' on top of the window. Check then under 'Grid Model' the data type that has to be shown in the plan view. Select the right color table for that data type.

If a grid model difference has to be shown in the plan view, check the option 'Difference' and select the right color table.

With the Coverage Settings it is easy to switch between the active grid model and the active grid model difference in the plan view. Check one of the two options and the settings in the Layers are automatically updated.

Check the option *Show color table* if the user wants to show the color table of the selected option on the right hand side of the plan view.

2.3.2 Profile – Realtime Design View

The Profile – Realtime Design view will show the bucket dredger with the bucket chain as a side view with additional information.

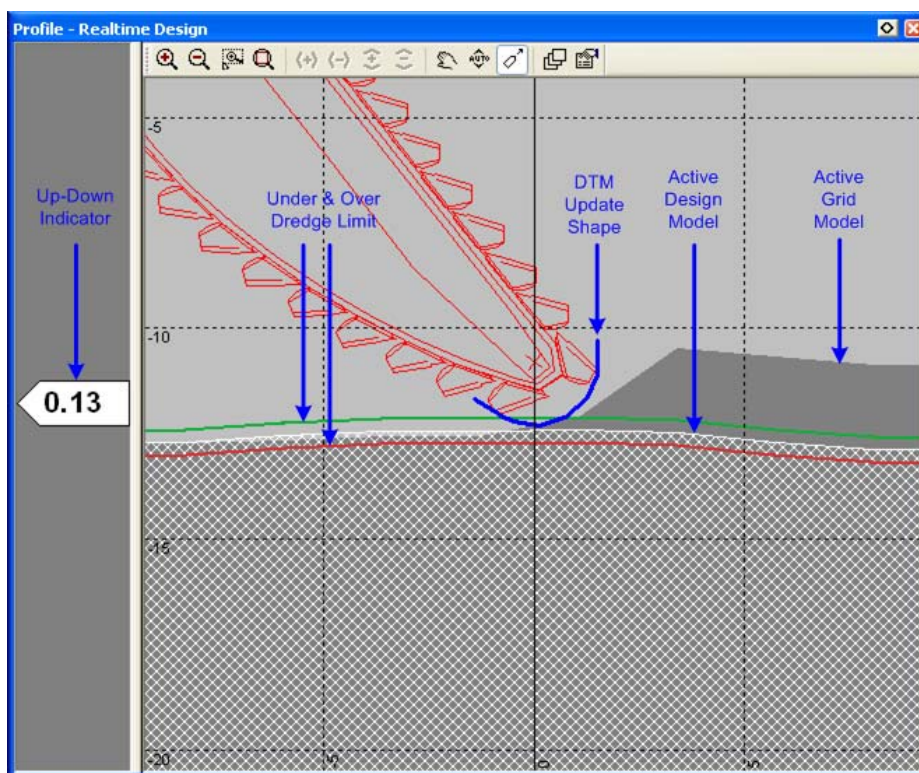


Figure 2-14 Profile – Realtime Design view with a right view of the bucket chain, grid model and design model

The underdredge and overdredge limits have to be specified in the Design Model tab in the Guidance page (see page 10).

The active design model and active grid model are automatically displayed in the view.

The DTM update shape is automatically calculated with the settings as specified in the properties of the Dredge Positioning System (see page 6). The shape displays the dredge area of the bucket chain. With the use of this shape the update for the active grid model is calculated.

For the Up-Down Indicator every item that is available or calculated in PDS2000 can be selected. Here above is for instance the computation 'Design Difference' (in the 'Drag-head Absolute Position') displayed. Click with the right mouse button in the Up-Down Indicator area to open the Layer Control of the area. Select in the Up-Down Indicator Layer the item 'Source Item' and select at the bottom the item that has to be displayed (see below).

The computation 'Design Difference' shows the difference between the lowest point of the bucket chain and Z-value of the design model. Another option is to select the computation 'Absolute Z Dredge Head(1)', which shows the absolute depth of the lowest point of the bucket chain.

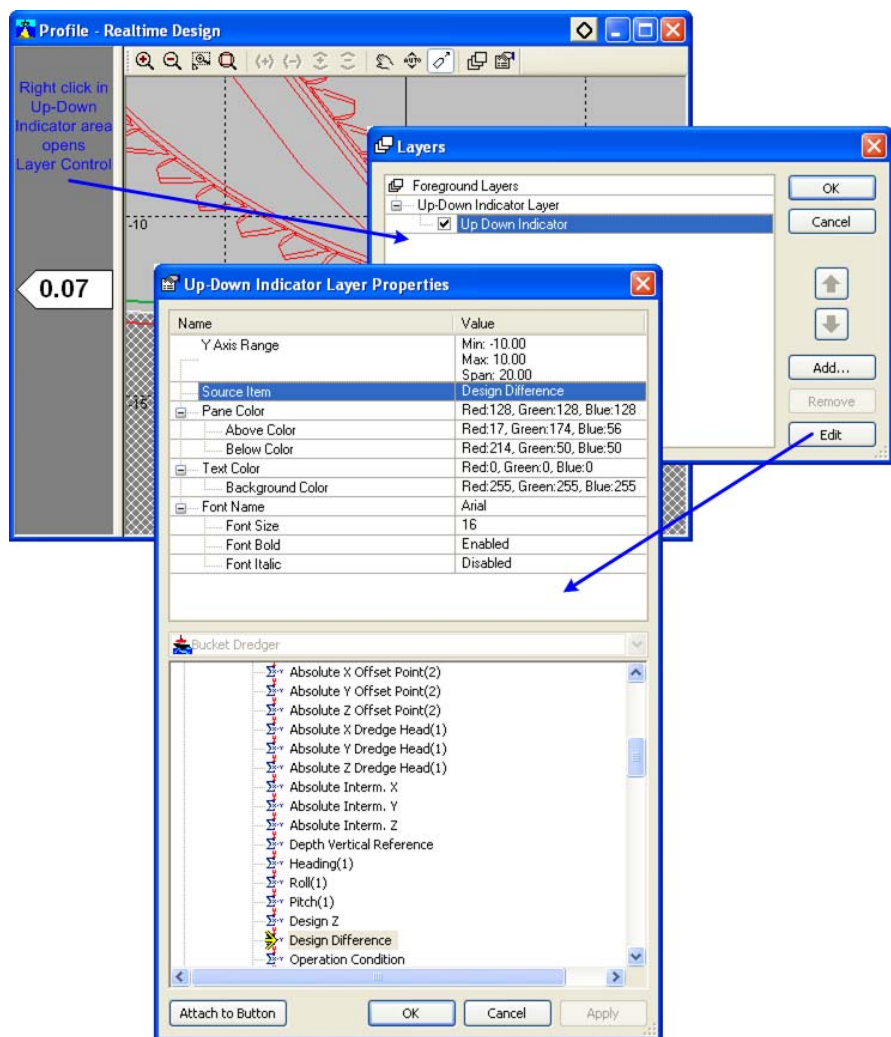



Figure 2-15 Select Source Item for the Up-Down Indicator

2.3.2.1 Profile Properties

Click on  in the toolbar or select 'Properties' in the context menu to open the Properties of the profile view.

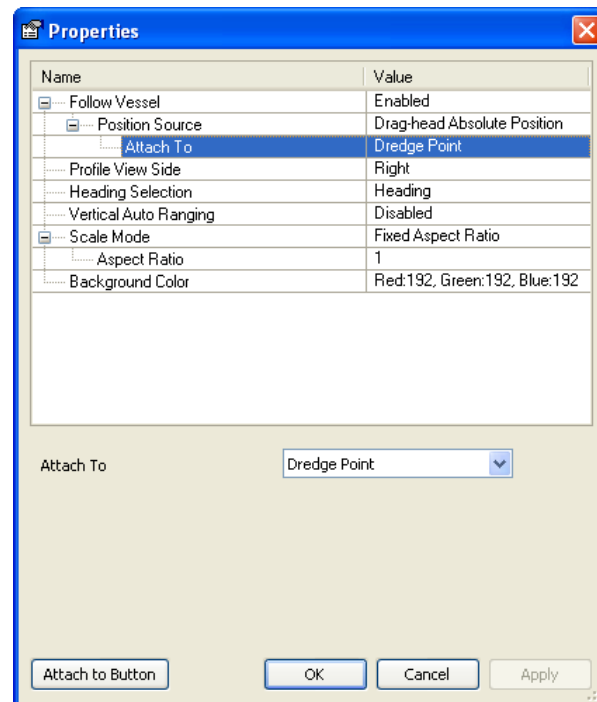


Figure 2-16 Properties of the Profile – Realtime Design view



By default the item 'Position Source' is set on the *Drag-head Absolute Position* and the item 'Attach To' is set on *Dredge Point*. Do not change the setting for the 'Position Source'. For 'Attach To' the user can choose between *Dredge Point* or *Sensor Reference Point*, where with *Dredge Point* the bottom of the bucket chain is followed and with *Sensor Reference Point* the bucket chain point is followed.



When the Profile – Realtime Design view is created the view is always from the *Left*. With the item 'Profile View Side' the view side can be changed to *Right*, *Front* or *Back*. The left Profile – Realtime Design view in the figure on page 11 is a view from the back. The different view sides have to be made as contours in the Geometry page (see page 3).

3 Calibration

3.1 Introduction

At the moment there is no procedure in the PDS2000 software to calibrate the angle of the bucket chain.

Below a method is explained how to calibrate the angle of the bucket chain and where to enter the computed value in the properties of the device driver.

3.2 Calibration Inclinometer

The inclinometer will be mounted on the ladder of the bucket chain. To be sure that the reading from the inclinometer matches with the angle of the ladder an inclinometer calibration has to be done.

For the best calibration the total length of the ladder has to be used. Move the bucket chain so that the centre of the bottom bucket chain wheel is on the waterline (see below), then measure from the bucket chain point to the waterline.

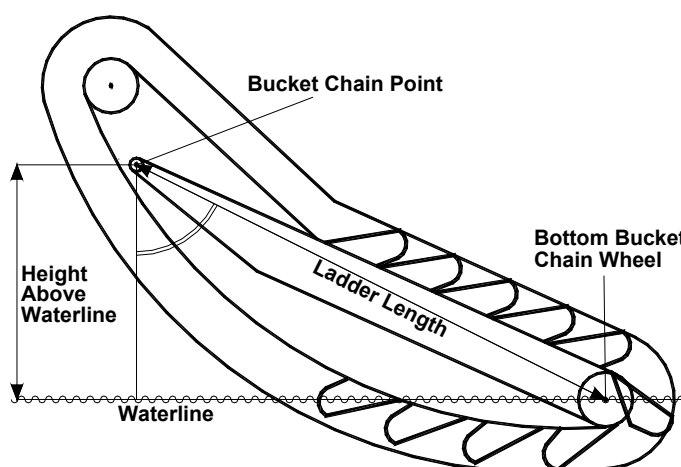


Figure 3-1 Bucket chain for the calibration of the inclinometer

When it is difficult to measure to the waterline, measure to the deck and then from the deck to the waterline on starboard and port. Take the mean

from both sides plus the height to the deck as the height above the waterline.

From the ladder length and the height of the bucket chain point above the waterline an angle can be calculated.


When it is difficult to put the centre of the bottom bucket chain wheel on the waterline, it is also possible to put an other point of the ladder on the waterline. Then also the distance from that point to the bucket chain point has to be measured.

The difference between the calculated angle and the inclinometer reading can be entered as the 'Sensor 1 Offset' in the properties of the Dredge Positioning System (Bucket) (see page 7). Check the sign convention before entering the correction.

4 Vessel Configuration

4.1 Introduction

In the chapter 'Starting PDS2000' of the PDS2000 User Manual is described how to setup a project with an application type and a configuration.

When a project is created with the application type 'Bucket Dredging' the configuration can be started in the Control Center with  from the toolbar or with the menu option *Acquisition > Configuration*.

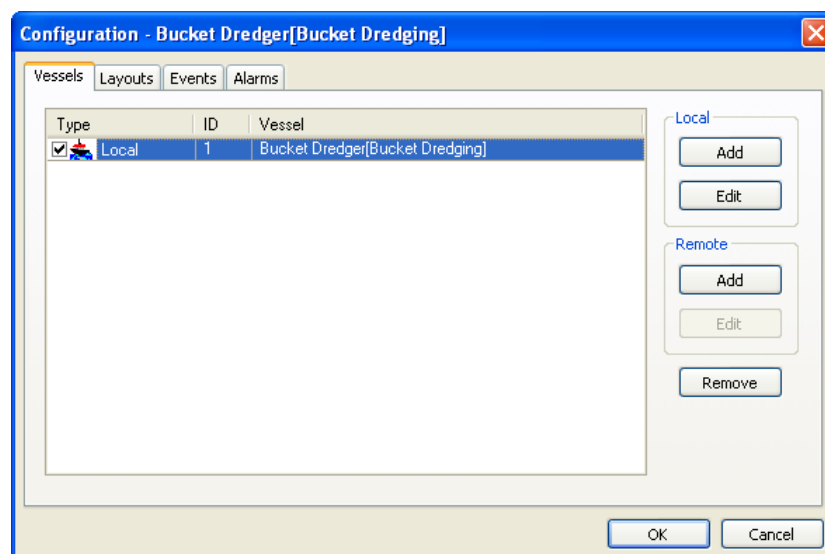
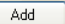



Figure 4-1 Configuration window

In the Configuration a vessel has to be added to the configuration. Use  (under Local) to add an existing vessel or create a new one. When a vessel is added, select the vessel and click on  (under Local) to open the Vessel Configuration.

4.2 Vessel Configuration

The Vessel Configuration window has several tab pages where the complete setup for the bucket dredger can be defined.

4.2.1 Geometry Page

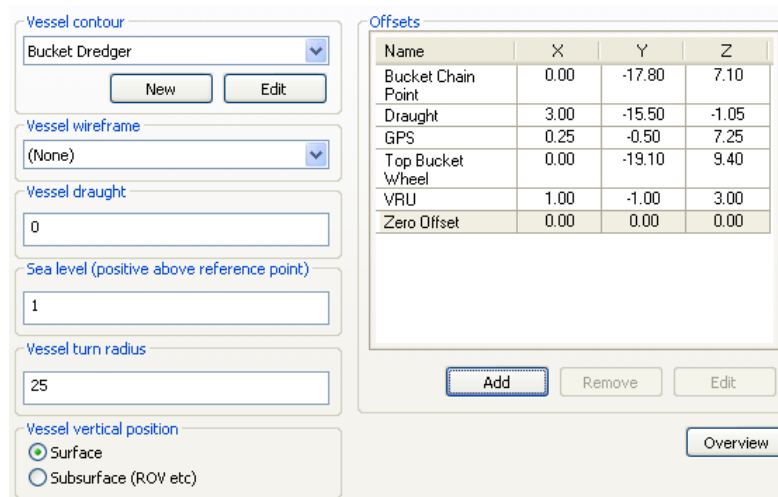

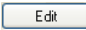


Figure 4-2 Geometry page of the vessel configuration

In the Geometry page the contours for the vessel and the bucket chain has to be created and all the offsets on the vessel has to be defined. Only the relevant items will be discussed below, for the other items the default settings can be used.

Vessel contour

Click on  to create a new vessel contour or click on  to open the selected vessel contour. In both cases the vessel contour editor will be opened (see below).


When the user is finished with the contours, select the vessel contour as the active contour, so that it will be displayed in the Acquisition.

Vessel wireframe

A vessel wireframe is a 3D drawing of the vessel and can be used in the 3D views in PDS2000. It is also possible to display the wireframe in the standard 2D views. These wireframes should be 3D DXF files. Select the wireframe of the vessel so that will be displayed in the Acquisition.

Offsets

An offset is a point of interest on the vessel, such as the location of a sensor (see page 25). The 'Zero Offset' is a PDS2000 pre-defined offset, the CRP and cannot be changed.

Click on  for an overview of the vessel contour and offsets. A top- and a starboard view of the vessel are shown. If no vessel contour is available, a default contour will be used in the views.

4.2.1.1 Vessel Contour

For the contours a top view and at least one side view have to be drawn. The side views of all the contours should be from the same side, so the vessel with the bucket chain can be displayed in a Profile – Realtime Design view in the Acquisition (see page 50).

This is just a list of offsets, in the Equipment page the offsets are assigned to the sensors.



One contour file can contain contours from different view sides, for instance a top and a right side view.

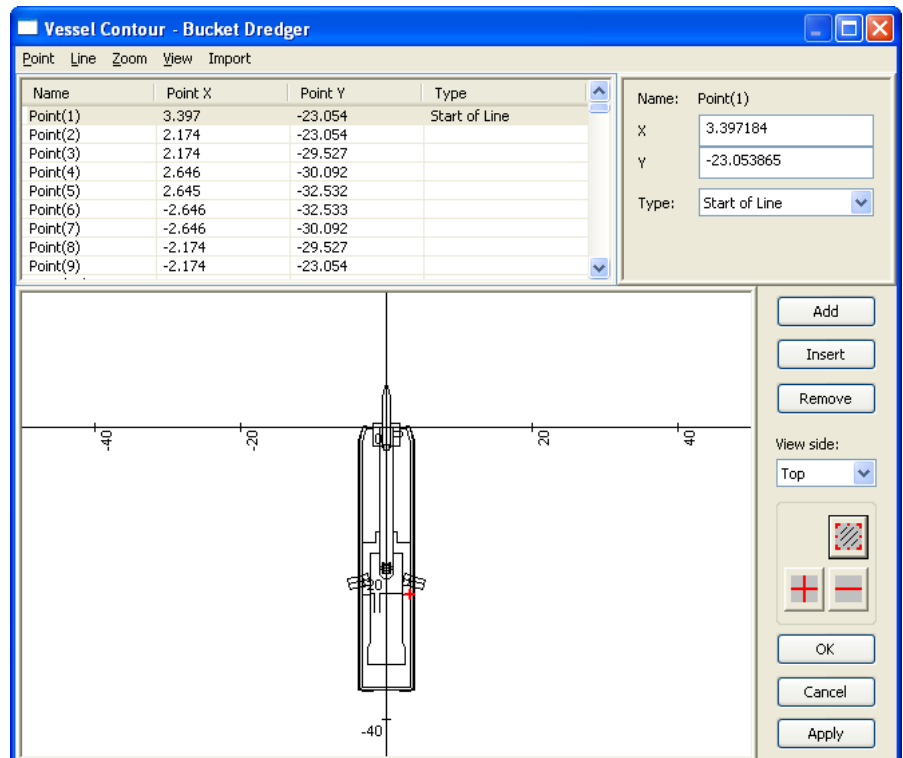


Figure 4-3 Example of a top view of a vessel

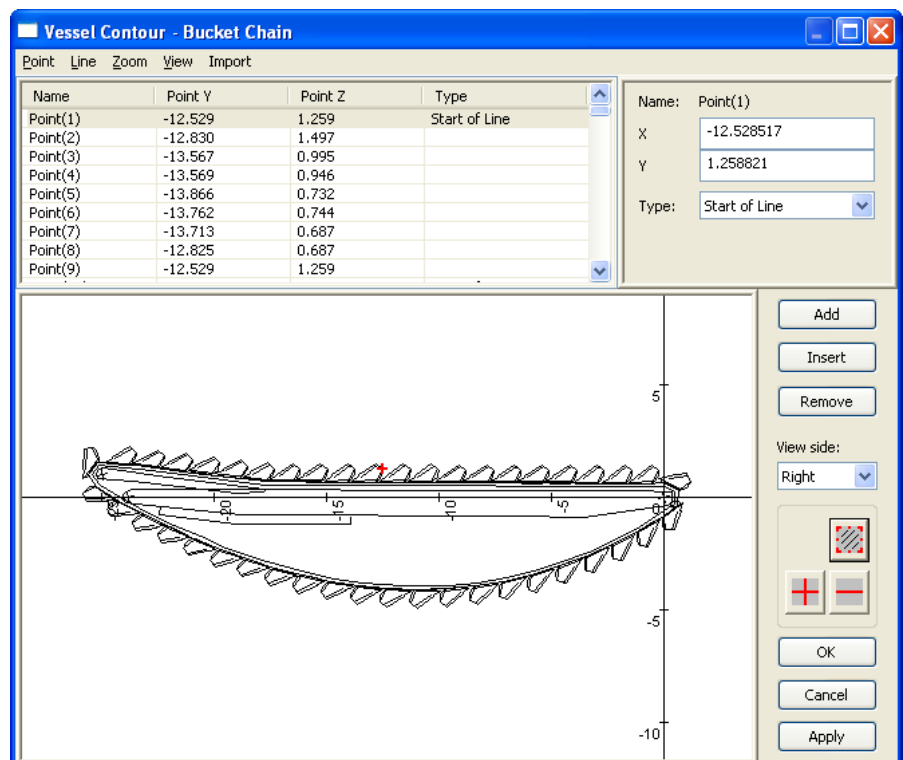


Figure 4-4 Example of a right view of a bucket chain

The origin (0,0,0) of the drawing for a bucket chain should be in the centre of the bottom bucket chain wheel. The negative Y-axis has to go through the bucket chain point (see below).

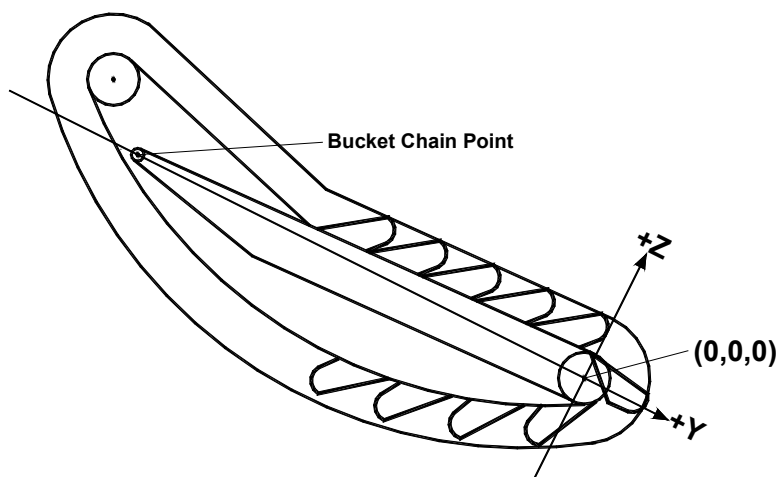


Figure 4-5 Drawing of the bucket chain with the origin (0,0,0)

Due to the complicity of the drawing as displayed above it is advisable to use the DXF import option to create the vessel and bucket chain contours. First select the view side that matches with the view side in the DXF file. Select from the menu bar of the Vessel Contour editor the option *Import > From DXF...* to import a contour. The origin and coordinates used in the DXF file should match with the coordinates and the origin of the vessel or the bucket chain.

If the user has no DXF data available, the edit tools in the vessel contour editor have to be used. The relevant options in the right top panel of the vessel contour editor are:

Name: Point(n)

Add the X and Y value for point(n) in the vessel coordinate system.

Type

Point. If the point(n) is not a *Start of Line* or a *Start of Polygon*.

Start of Line. If point(n) is the first point of a line. Until a new *Start of Line* or *Start of Polygon* is selected all points after this point will be part of the line.

Start of Polygon. If point(n) is the first point of the polygon. Until a new *Start of Line* or *Start of Polygon* is selected all points after this point will be part of the polygon. The polygon will be solid.

The buttons and options on the right side in the editor are:

Add

Add a new point to the contour. The added point comes always at the end of the list.

Insert

Insert a new point above the location of the cursor in the list.

Remove

Delete the selected point from the list.

View side:

Top

Select the view side of the vessel contour; top, bottom, left, right, front and back.



Zoom Extents, Zoom In / Out.

Click on to save the contour and to close the vessel contour editor.

4.2.1.2 Offsets

The offsets, that are needed for the bucket dredging, have to be added to the offset table in the Geometry page. The possible vessel offsets are offsets for:

- Antenna of a Positioning System Geogs
- Bucket Chain Point
- Top Bucket Chain Wheel
- VRU
- Depth Sensor

The Zero offset is the zero point of the vessel.

See Dredge Positioning System (Bucket) on page 26 for a drawing of the bucket chain with the bucket chain point and the top bucket chain wheel.

4.2.2 Equipment Page

In the Equipment page the sensors used for the bucket dredging are:

- Dredge Positioning System (Bucket) (see below)
- Positioning System Geogs (see page 30)
- Compass (see page 32)
- VRU (see page 33)

If no RTK system is used as positioning system then the following equipment is needed:

- Depth Sensor (see page 33)
- Tide gauge(s) (see page 35)


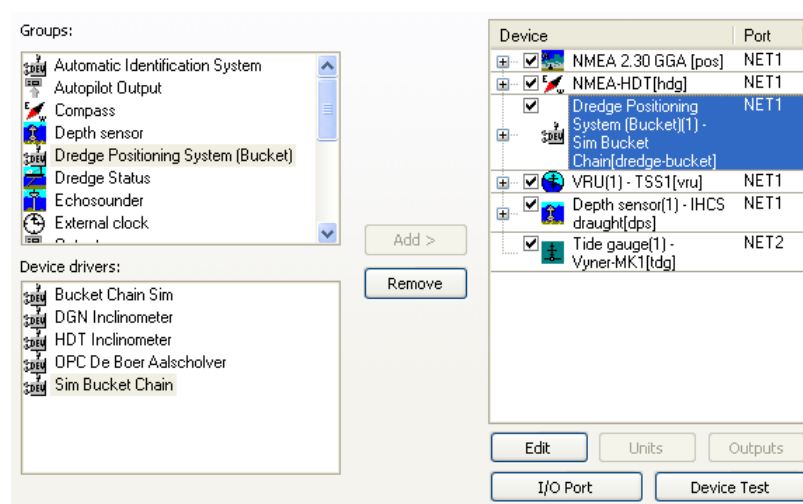


Figure 4-6 Equipment page

Select first one of the available Groups and then select in that group one of the available device drivers. Click on  to add the selected driver to the list of devices on the right side.

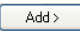


In the explanations of the different drivers only the items from the properties that are relevant for the bucket dredging application and can be set by the user will be discussed!!!


4.2.2.1 Dredge Positioning System (Bucket)

This device driver calculates the position and the depth of the lowest point of the bucket chain with the data from the inclinometer on the ladder.

The first properties window (' Dredge Positioning System (Bucket)'):

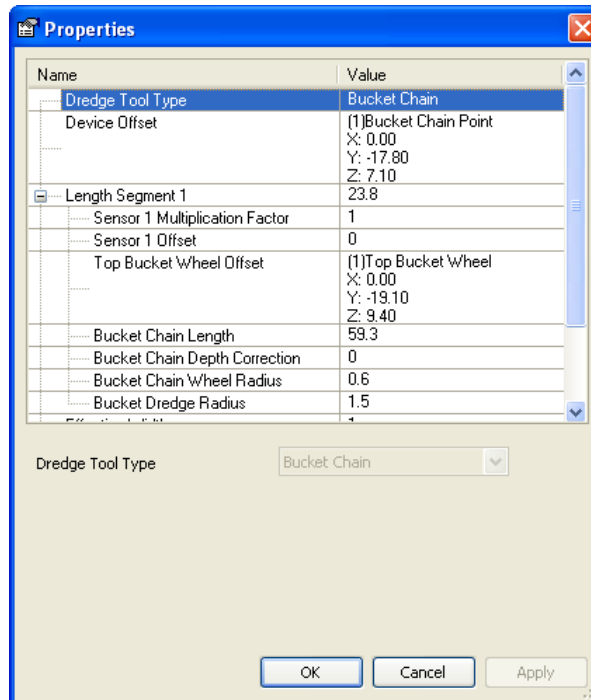

Name	Value
Dredge Tool Type	Bucket Chain
Device Offset	(1)Bucket Chain Point X: 0.00 Y: -17.80 Z: 7.10
Length Segment 1	23.8
Sensor 1 Multiplication Factor	1
Sensor 1 Offset	0
Top Bucket Wheel Offset	(1)Top Bucket Wheel X: 0.00 Y: -19.10 Z: 9.40
Bucket Chain Length	59.3
Bucket Chain Depth Correction	0
Bucket Chain Wheel Radius	0.6
Bucket Dredge Radius	1.5

Dredge Tool Type: 

OK Cancel Apply

Figure 4-7 First properties window of the Dredge Positioning System (Bucket)

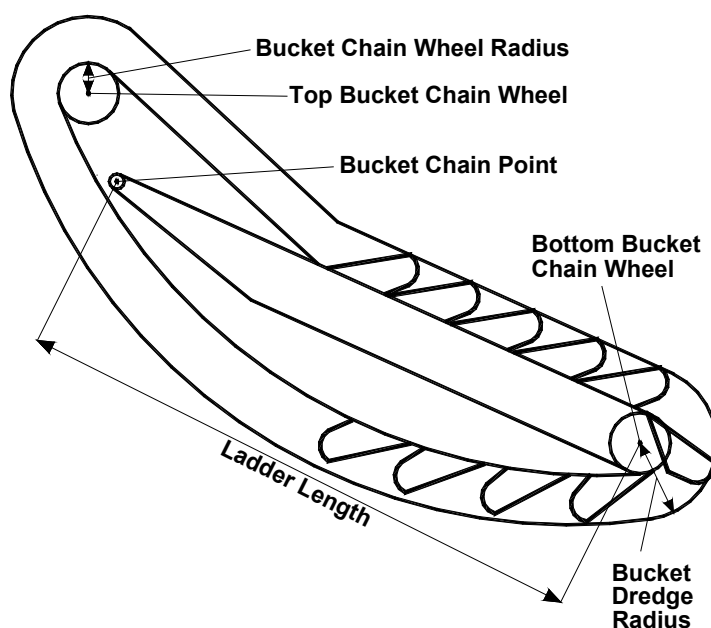


Figure 4-8 Drawing of the bucket chain

Device Offset

The offset of the bucket chain point as defined in the Geometry page. This offset is in vessel coordinates, not in bucket chain coordinates.

Length Segment 1

The ladder length in meters; this is the length between the bucket chain point and the centre of the bottom bucket chain wheel (see figure above).

Sensor 1 Multiplication Factor

The multiplication factor for the inclinometer reading. Keep this value on 1 and change it only when it is really necessary.

Sensor 1 Offset

The offset for the inclinometer reading. Use this when there is a mismatch between the angle from the inclinometer and actual angle of the ladder as measured in the inclinometer calibration (see page 19).

Top Bucket Wheel Offset

The offset of the top bucket chain wheel as defined in the Geometry page. This offset is in vessel coordinates, not in bucket chain coordinates.

Bucket Chain Length

The total bucket chain length. The length can be obtained by measure the length over 5 buckets with a tape measure and divide the observation by 5, then multiply this by the number of buckets on the chain.

Bucket Chain Depth Correction

The dredge depth can be corrected with this correction; a positive correction will make the dredge depth deeper.

Bucket Chain Wheel Radius

The radius of the top or bottom bucket chain wheel.

Bucket Dredge Radius

The distance from the centre of the bottom bucket chain wheel to

the edge of the bucket when it passed the bottom bucket chain wheel.

Effective Width

The width of the bucket.


Dredge Head Shape

Select the contour file for the bucket chain that is made in the Geometry page.

Wireframe

If a wireframe (3D DXF file) is available for the bucket chain; select the DXF file for the bucket chain.

In stead of the Dredge Head Shape as specified above this wireframe will then be used in the views of the Acquisition.

The second properties window (' Drag-head Relative Position'):

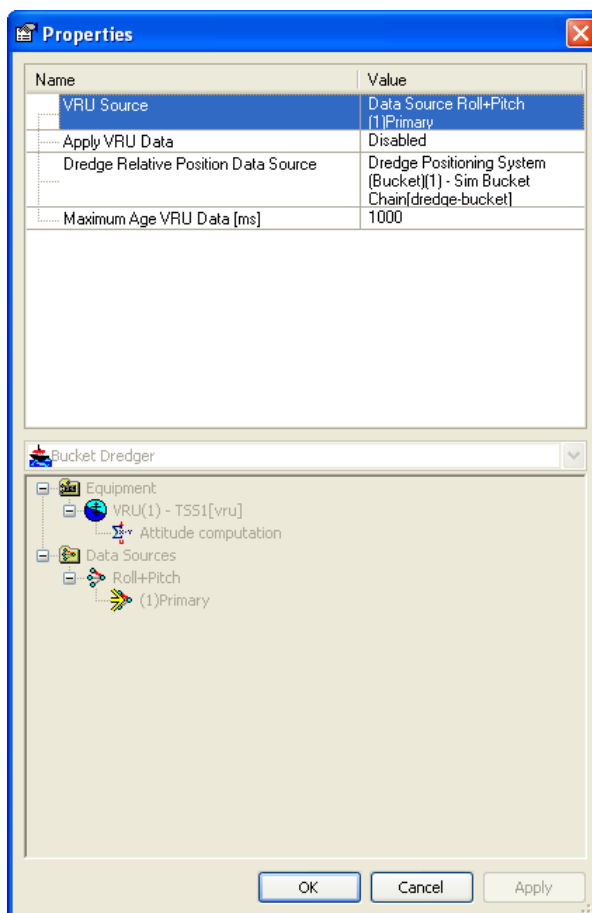


Figure 4-9 Second properties window of the Dredge Positioning System (Bucket)

Apply VRU Data

Disabled. No Roll and Pitch applied to compute the location of the lowest point of the bucket chain. (This is the default setting).

Enabled. Roll and Pitch applied to the computation.

Maximum Age VRU Data

When the age of the latest VRU data is smaller than the number of milliseconds specified the VRU data will be applied to the dredge position. Only valid when the option 'Apply VRU Data' is *Enabled*.

The third properties window (' Drag-head Absolute Position'):

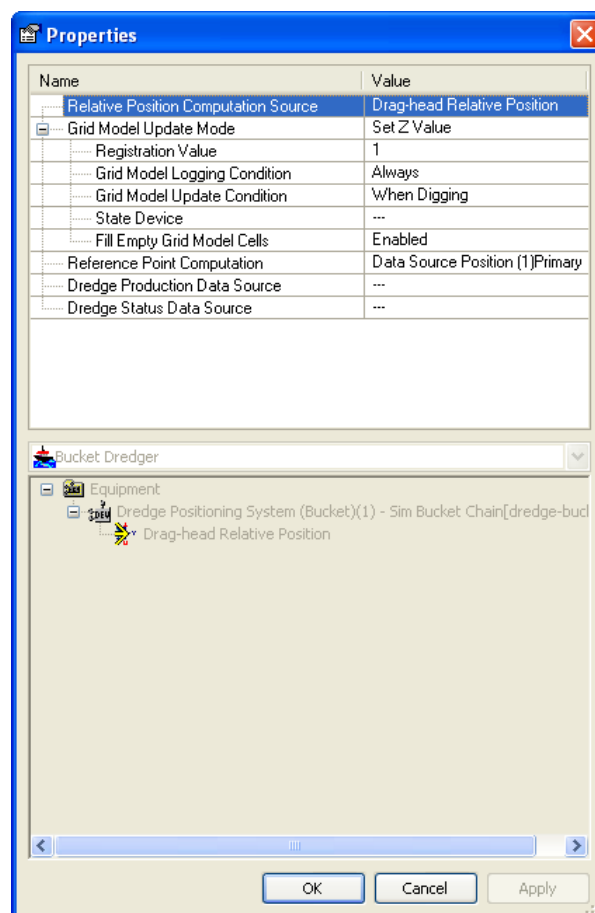


Figure 4-10 Third properties window of the Dredge Positioning System (Bucket)

Grid Model Update Mode

Select the update mode for the active grid model that is specified in the logging (see page 38). The default setting *Set Z Value* is the best update mode for the grid model.

With the right update mode the grid model that is displayed in the Plan View – General Dredge Operation (see page 43) and in the Profile – Realtime Design view (see page 50) will be updated.

Other settings are *Increment Hit Count*, *Add Registration Value*, *Set Registration Value*, *Volume Update* and *Fixed Volume Grab*.

Registration Value

The value that will be used when the option 'Grid Model Update Mode' is set on *Add Registration Value* or *Set Registration Value*.

Grid Model Logging Condition

The logging condition for the grid model. The default setting *Always* is the best setting for the logging condition.

Other settings are *Status Signal*, *Status Dredging* and *Clam Shell Closing*.


Fill Empty Grid Model Cells

Enabled. The empty cells in the grid model will be filled with the depth of the bottom of the bucket chain. (This is the default setting).
Disabled. No empty cells will be filled.

4.2.2.2 Positioning System Geogs

This sensor gives a position derived from several GPS satellites. If this system is not a RTK system then a depth sensor (see page 33) and one or more tide gauges (see page 35) have to be interfaced.

The first properties window ('Positioning System Geogs'):

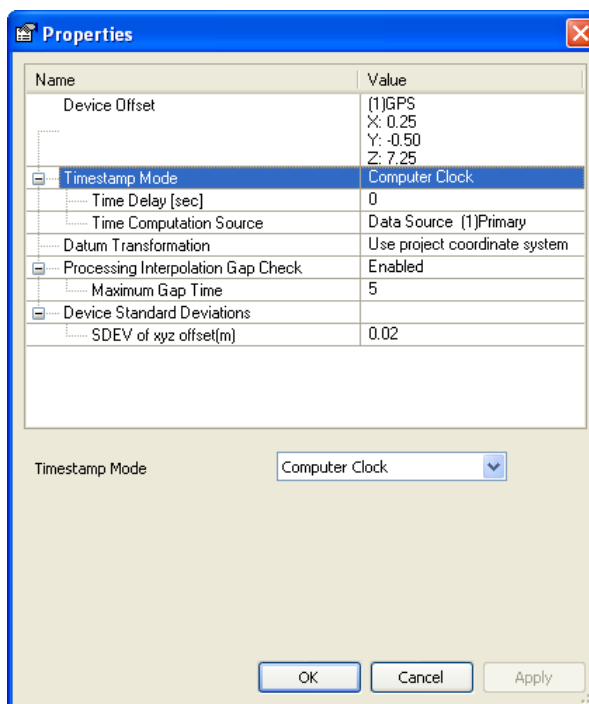

Name	Value
Device Offset	(1)GPS X: 0.25 Y: -0.50 Z: 7.25
Timestamp Mode	Computer Clock
Time Delay [sec]	0
Time Computation Source	Data Source (1)Primary
Datum Transformation	Use project coordinate system
Processing Interpolation Gap Check	Enabled
Maximum Gap Time	5
Device Standard Deviations	
SDEV of xyz offset(m)	0.02

Timestamp Mode: Computer Clock

OK Cancel Apply

Figure 4-11 First properties window of the Positioning System Geogs

Device Offset

The offset of the GPS antenna as defined in the Geometry page.

Timestamp Mode

In PDS2000 a time has to be attached to the received position.

Computer Clock. The time of the computer.

External Clock. The time from an external clock that has to be added to the equipment list.

Time in Message. The time as is received in the data string.

For the bucket dredging the setting for the timestamp mode can be *Computer Clock*.

Time Delay

The latency in the GPS receiver. For the bucket dredge application the default setting 0 can be used.

Datum Transformation

The position from the positioning system is in most cases a position on a satellite ellipsoid (in most cases WGS'84). To compute the position on a local ellipsoid the relevant datum transformation has to be selected.

Use other datum transformation. An extra option appears in the properties called 'Datum Transformation' (see below) where a different coordinate system can be selected.

Use project coordinate system. The datum transformation as specified in the coordinate system will be used for the computation.

Use no datum transformation. The coordinates on the local ellipsoid will be computed without a datum transformation.

Datum Transformation

The datum transformation as it will be used to compute the incoming position on the local ellipsoid. This option is only available when *Use other datum transformation* is selected above.

In the second properties window ('Antenna Position from Geogs') nothing can be set by the user.

The third properties window ('Reference Point Computation'):

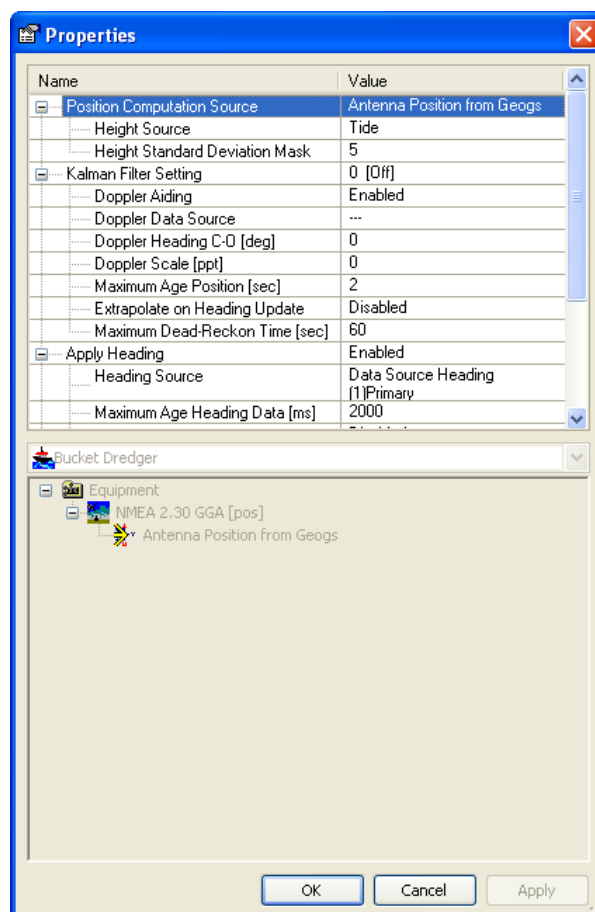


Figure 4-12 Third properties window of the Positioning System Geogs

Height Source

The source that will be used for the height computation.

None. No height computation.

GPS Height (RTZ). When the positioning system is a RTK system, the Z of the RTK will be used for the height computation.

Tide. The tide values will be used for the height computation when in real time one or more tide gauges are connected to the system or when predicted tide data is used.

Height Standard Deviation Mask

The maximum value for the standard deviation of the RTK Z to accept the RTK Z for the height computation. If the standard deviation is more than the maximum value the height computation becomes 'Height Held'. Only valid if 'Height Source' is set on *GPS Height (RTZ)*.

If no standard deviation is received, the height standard deviation mask has to be at least 0.05m otherwise PDS2000 does not accept the RTK Z for the height computation.



Kalman Filter Setting

The kalman filter setting as used for the position calculation. The default setting for the kalman filter is 0 (Off). For the bucket dredging application keep this setting on 0!



The next options under kalman filter settings are irrelevant for the bucket dredging.



Apply Heading

Enabled. The heading information is used for the calculation of the reference position. This is the default setting and do not change this option otherwise the reference position is calculated wrong.

Disabled. No heading information is used.

Wait for Heading Data

Disabled. Not waiting for heading data. (This is the default setting).

Enabled. PDS2000 will wait for heading data, so a valid position will be calculated when heading data is available.

Apply VRU Data


Enabled. The VRU data is used for the calculation of the reference position.

Disabled. No VRU data is used.

4.2.2.3 Compass

The compass is used to get a heading of the vessel.

The first properties window ('Compass'):

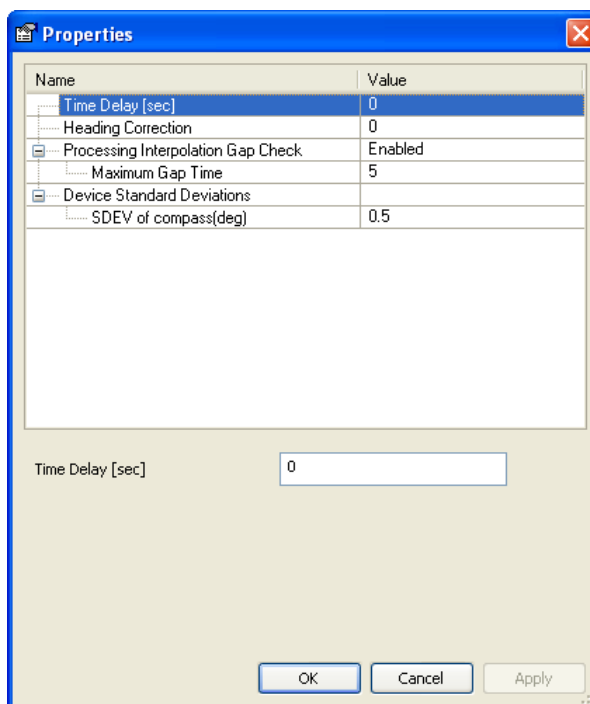

Name	Value
Time Delay [sec]	0
Heading Correction	0
Processing Interpolation Gap Check	Enabled
Maximum Gap Time	5
Device Standard Deviations	0.5
SDEV of compass(deg)	0.5

Time Delay [sec]

OK Cancel Apply

Figure 4-13 First properties window of the Compass

Time Delay

The time delay in the compass in seconds. For the bucket dredging application the default setting 0 can be used.

Heading Correction

The correction as derived from the compass calibration.


This is the misalignment between the heading of the compass and the heading of the vessel.

In the second properties window ('Heading computation') nothing can be set by the user.

4.2.2.4 VRU

A VRU (motion sensor) is used to measure the attitude (roll and pitch) of the vessel.

The first properties window ('VRU'):

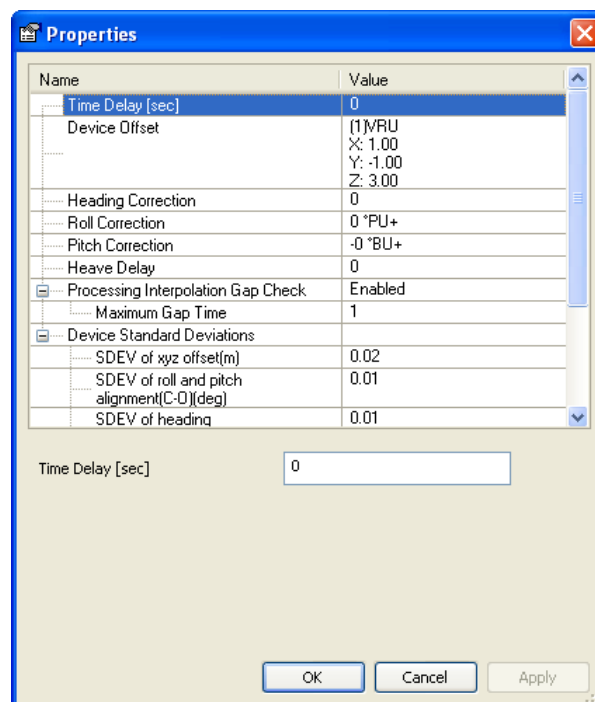

Name	Value
Time Delay [sec]	0
Device Offset	(1)VRU
Heading Correction	0
Roll Correction	0 *PU+
Pitch Correction	-0 *BU+
Heave Delay	0
Processing Interpolation Gap Check	Enabled
Maximum Gap Time	1
Device Standard Deviations	0.02
SDEV of xyz offset(m)	0.01
SDEV of roll and pitch alignment(C-0)(deg)	0.01
SDEV of heading	0.01

Time Delay [sec] 0

OK Cancel Apply

Figure 4-14 First properties window of the VRU

Time Delay

The time delay in the VRU in seconds. For the bucket dredging application the default setting 0 can be used.

Device Offset

The offset of the motion sensor as defined in the Geometry page.

Heading Correction

If the VRU is not aligned with the vessel, enter the misalignment of the VRU.

Roll / Pitch Correction

A roll and pitch correction, derived from the VRU calibration, can be entered in the properties. Check the sign convention of the roll and pitch before entering the values.

In the second properties window ('Attitude computation') nothing that is relevant can be set by the user.

4.2.2.5 Depth Sensor

When the positioning system is not a RTK system a depth sensor is used to measure the draught of the vessel.



When a depth sensor is used the sensor has to be set as primary data group for the sea level data source in the Data Source (see page 37).

The first properties window ('Depth sensor'):

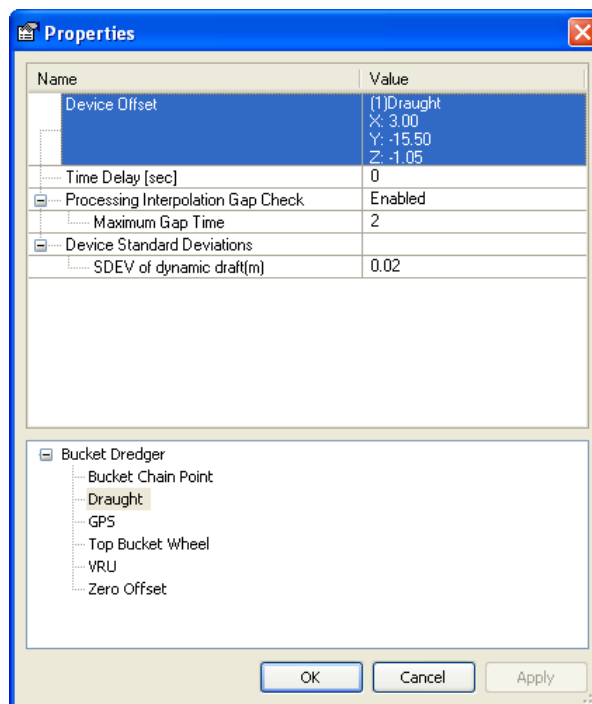


Figure 4-15 First properties window of the Depth sensor

Device Offset

The offset of the depth sensor as defined in the Geometry page.

Time Delay

The time delay in the depth sensor in seconds. For the bucket dredging application the default setting 0 can be used.

The second properties window ('Sealevel computation'):

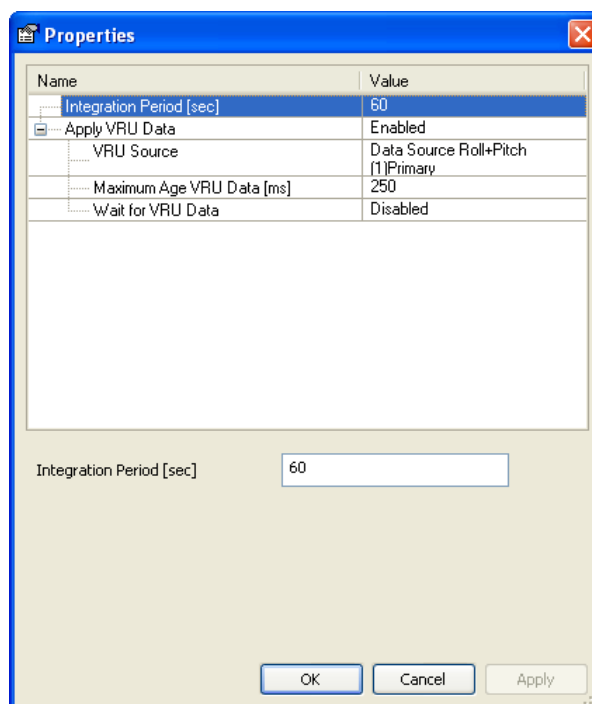


Figure 4-16 Second properties window of the Depth sensor

Integration Period

The integration period is the period over which a mean value is computed. This mean value is then used as the value from the depth sensor.

Apply VRU Data

Enabled. The VRU data is used to calculate the actual depth of the vessel. (This is the default setting).

Disabled. No VRU data is used.

4.2.2.6 Tide Gauge

When the positioning system is not a RTK system one or more tide gauges are used to measure tide information to calculate the absolute depth.

The properties window (' Tide gauge'):

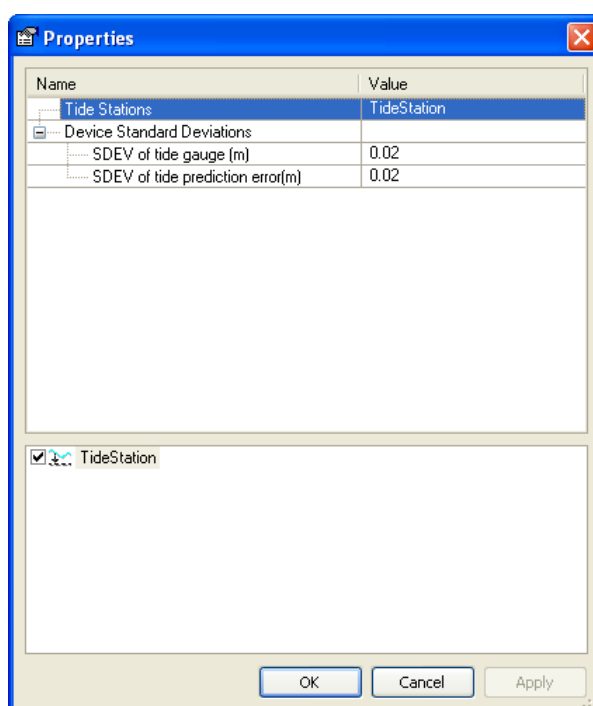


Figure 4-17 Properties window of the Tide gauge


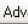
Tide Stations

Select one or more tide stations that will be used to calculate the tide correction.

The tide stations have to be created in the Advanced Computations (see below) before they can be selected here.

4.2.3 Computations Page

When no RTK system is used for the positioning an extra computation is needed to compute the tidal correction.

A ' Tide Computation' has to be created in the Advanced Computations. Click on  to open the Advanced Computations.

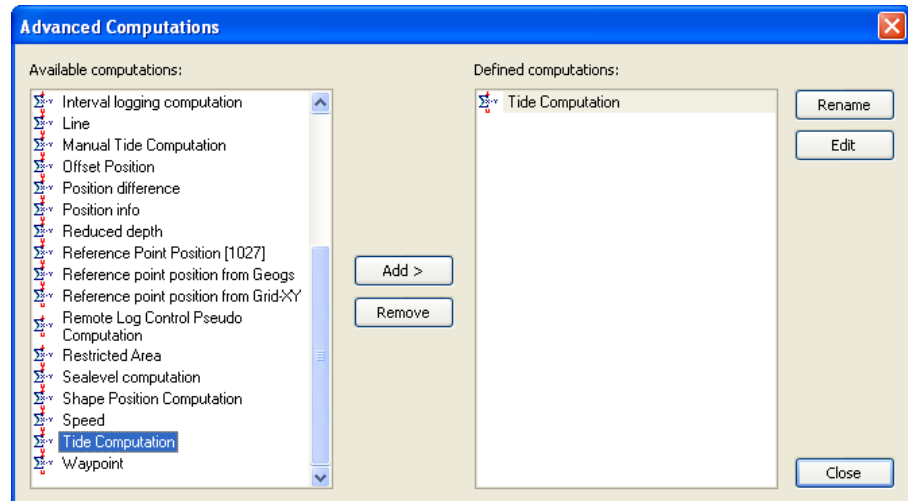



Figure 4-18 Advanced Computations with a tide computation

Select on the left side the 'Tide Computation', click on  and the items in the properties can be set.

The properties of the computation:

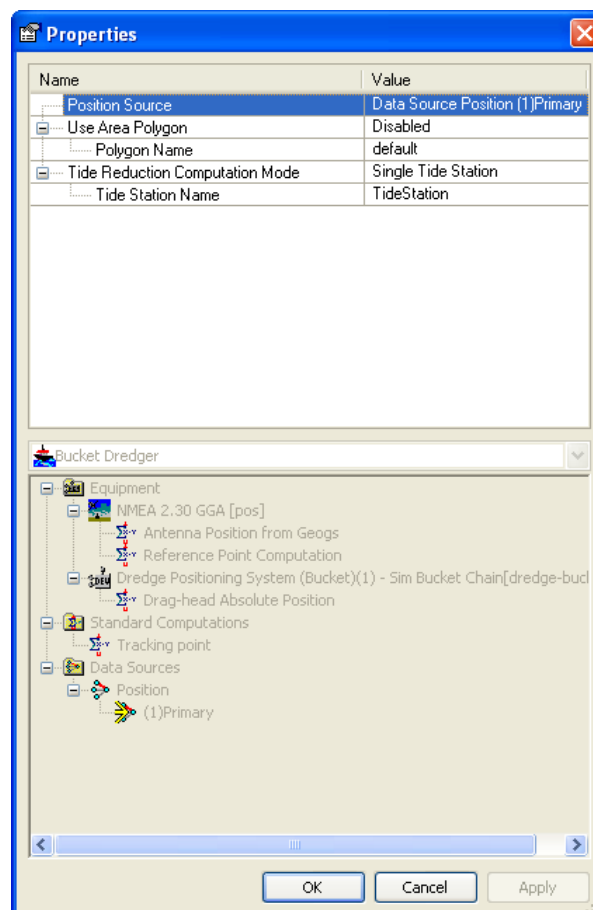


Figure 4-19 Properties window of the Tide computation

Use Area Polygon

Disabled. No area polygon used, so the tide computation is always applied. (This is default setting).

Enabled. Only when the vessel is inside the selected area polygon (clipping polygon) the tide computation is applied.

Polygon Name

Select a clipping polygon as the area polygon.

The clipping has to be created in the clipping polygon editor (see PDS2000 User Manual for more information) before it can be selected.

Tide Reduction Computation Mode

When only one tide station is used, select the mode *Single Tide Station*.

When more tide stations are used, select the mode *Multiple Tide Stations* or when the tide stations are along a route the mode *Tide Stations Along Route*.

Tide Stations

Select the tide station(s) that will be used for the tide computation. The tide stations have to be created in the Explorer (see PDS2000 User Manual for more information) before they can be selected.

4.2.4 Data Source Page

In the Data Source page the order of several data sources can be defined.

With a depth sensor selected in the Equipment list the sea level data source will have two data groups.

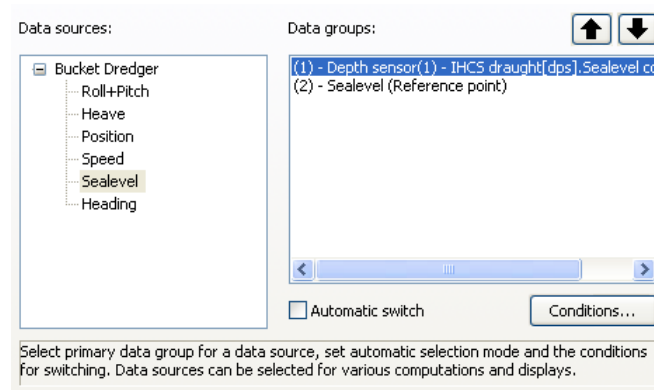


Figure 4-20 Data Source page with the depth sensor as primary data group

By default the data group 'Sealevel (Reference point)' will be the primary data group. When a depth sensor is available and the depth sensor is used for the computation of the sea level then the depth sensor has to become the primary data source.

Select the depth sensor and click on  to move the depth sensor to the top, as is displayed above.

4.2.5 Guidance Page

In the Guidance page several types of guidance can be used to guidance the survey. For a bucket dredger the most useful guidance is the design model, because then it is visible in the views to which depth the bucket dredger has to dredge.

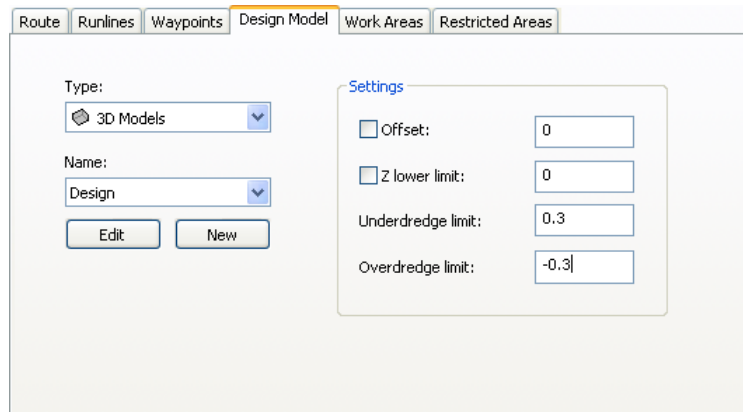


Figure 4-21 Design Model tab in the Guidance page

Type

Select as design model a 3D Model or a Grid Model.

Name

Select the 3D Model or Grid Model.

When no model is available click on and the 3D Design Model Editor or the Grid Model Editor will be opened to create a new model. With the editor of the selected file type will be opened to check or modify the model.

See for an explanation of both editors the PDS2000 User Manual.

Settings

Offset

When this option is checked, an offset to the Z value of the design model will be set.

Z lower limit

When this option is checked, a new Z value for the design model can be set.

Underdredge/Overdredge limit

These two limits are offsets to the Z value of the design model. The limits are just as indication and no alarms or checks are done with these limits.

The limits can be displayed as extra lines in the Profile – Realtime Design view (see page 50).

4.2.6 Logging Page

In the Logging page the logging can be defined. The two logging formats that are relevant for this application are the PDS2000 Format and the PDS2000 Grid Model.

The logging in the PDS2000 Format is always checked and can not be unchecked by the user. The logging in a PDS2000 Grid Model should be checked. Select the PDS2000 Grid Model as file format and in the Logging page two extra dialogs will be displayed, as shown below.

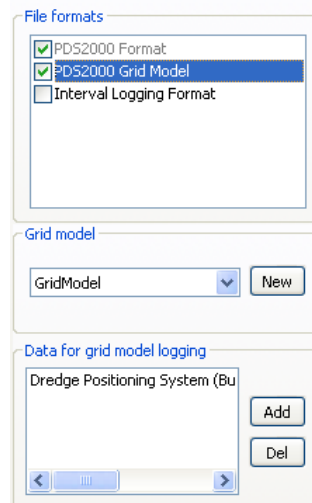


Figure 4-22 Logging page with PDS2000 Grid Model

Grid model

Select an existing grid model or create a new one with [New](#).

The grid model should be of the dredge location and should contain the measured depths of the location.

Data for grid model logging

Select with [Add](#) the device data of the 'Dredge Positioning System (Bucket)'. This device data will be used to update the grid model with the actual dredge depths.

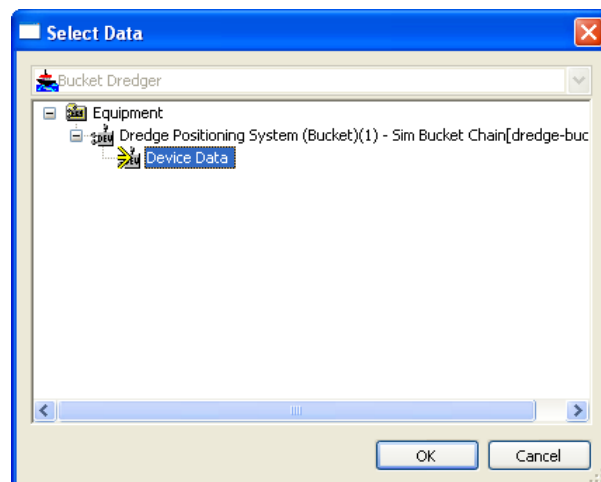


Figure 4-23 Select the device data for the grid model logging

5 Acquisition

5.1 Introduction



Before the dredging can be started for the first time a calibration of the bucket chain has to be done. See for a detailed explanation of the calibration the chapter Calibration on page 19.

The Acquisition is the online section of PDS2000. With several views in the Acquisition the dredge situation can be monitored. The minimum number of views should be a Plan View where the bucket dredger with the bucket chain is visible and one or more Profile views for a side or back view of the bucket dredger with the bucket chain.

The views that will be discussed in this chapter are:

- Plan View – General Dredge Operation (see page 43)
- Profile – Realtime Design view (see page 50)

See for other views, which can be used in the Acquisition, the chapter 'Views' in the PDS2000 User Manual.



For an explanation of the functionality of the Acquisition see the chapter 'Acquisition' in the PDS2000 User Manual.

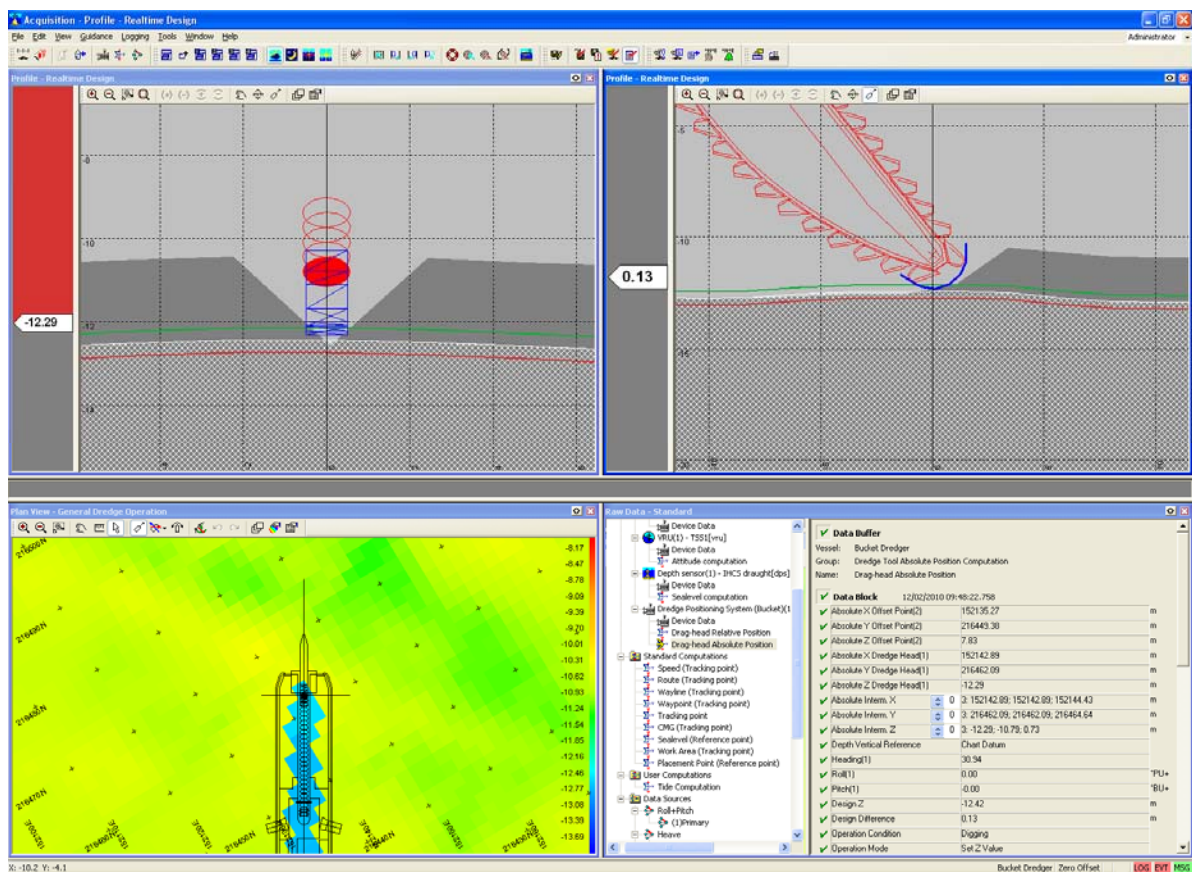


Figure 5-1 Example of a layout in the Acquisition

5.2 Plan View – General Dredge Operation

This plan view will show the bucket dredger with the bucket chain in a top view with additional information.

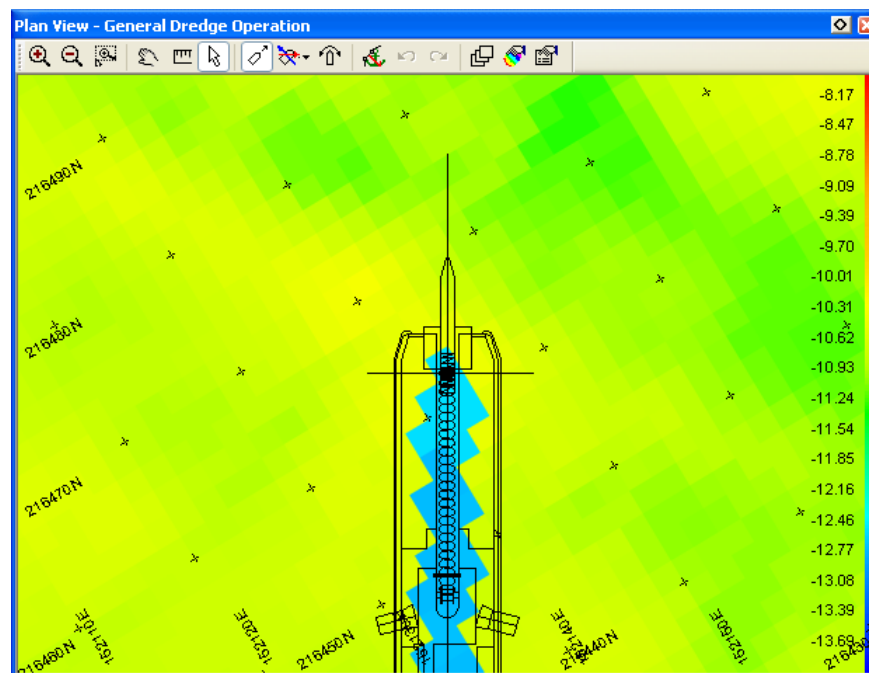




Figure 5-2 Plan View – General Dredge Operation view with orientation mode 'Heading Up'

The context menu can be opened with a right mouse click in the view.

When this plan view is created, automatically the active grid model and the dredge layer with the bucket dredger information are loaded. The first time the active grid model will be shown in black, because there is no color table selected for the grid model. Click on  in the toolbar or select 'Coverage Setting' in the context menu of the plan view to open the Coverage Settings and select the right color table for the Z Average of the grid model (see page 49).

When no color table can be selected in the Coverage Settings a color table has to be created in the Explorer before it can be used. See for more information the chapter 'Explorer' in the PDS2000 User Manual.

When the vessel is not displayed in the plan view then set the view in the Follow Vessel mode. Click on  in the toolbar or select 'Follow Vessel' in the context menu of the plan view to set the Follow Vessel mode on.

5.2.1 Plan View Toolbar and Context Menu

In the context menu of the plan view are next to the toolbar buttons some extra items added. Below all the items/buttons will be explained.

The items in the toolbar and the context menu are:

Zoom Functions (, ,)

Zoom In, Zoom Out, Zoom Window and Zoom Extents. The zoom window option works only when Follow Vessel mode is off. The Zoom Extents has no button in the toolbar.

Pan ()

Toggles the pan option on/off. When pan is active, keep the left mouse button in and move the mouse to pan through the data.

The + and – key of the numerics keyboard can also be used for the Zoom In and Zoom Out.

The pan option can also be switched off by clicking on the right mouse button.


When the pan option is switched on and the Follow Vessel is on then the Follow Vessel will be switched off. The Follow Vessel switches automatically on again when the pan is switched off.

Redraw

Redraw the plan view.

Measure

Measure a distance and a bearing in the plan view. On the first use the measure starts at the vessel's tracking point. With a mouse click the start of the measurement can be at any location in the view. The measure window shows start and end coordinates as well as distance and bearing between the two locations.

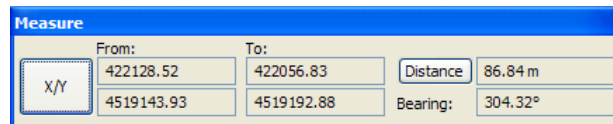




Measure			
	From:	To:	
	422128.52	422056.83	Distance: 86.84 m
	4519143.93	4519192.88	Bearing: 304.32°

Figure 5-3 Measure window in the plan views

Click on  to change the presentation from grid to projection coordinates in a selectable format.
A right mouse click stops the measure option.

Measure Line Relative

Measure a distance to the start and end of a line and the offtrack to that line. Draw a line by selecting a start and end point of the line with the left mouse button. The measure window shows start and end coordinates and the coordinates of the current location of the cursor. Also the distance from the cursor to the start and end point of the line and the offtrack is given.

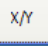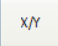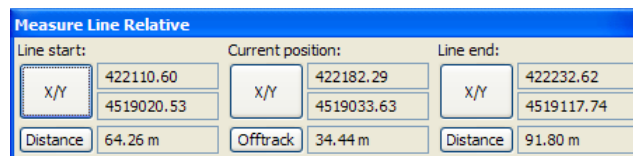

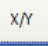
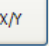
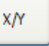
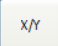
Measure Line Relative					
Line start:		Current position:		Line end:	
	422110.60		422182.29		422232.62
	4519020.53		4519033.63		4519117.74
Distance	64.26 m	Offtrack	34.44 m	Distance	91.80 m

Figure 5-4 Measure Relative window

Click on  to change the presentation from grid to projection coordinates in a selectable format.
A right mouse click stops the measure option.

Save Snapshot

The picture of the plan view can be saved as a JPEG file.

Save as GeoTIFF

The picture of the plan view will be saved as a GeoTIFF file (geo-referenced TIFF file).

Add Waypoint

Click with the mouse on the location where a waypoint has to be added, give a name for the waypoint and automatically a wayline is drawn from the vessel to the new waypoint.

Add Symbol

A C-Map object can be added to the plan view, only possible when a C-Map layer is added in the Layer Control.
Select an object and its attributes from the list. Select with the cross-

shaped cursor the location for the new object.
A right mouse click stops the select location option.

Find Symbol

Search for a C-Map object in the plan view.

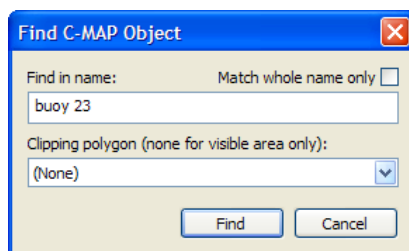


Figure 5-5 Find C-Map object in the plan view

If the C-Map object is found, an information window will be opened.

Draw Route

Draw with the mouse a route in the plan view. A right mouse click will stop the drawing of the route.

Draw Polygon

Draw with the mouse a polygon in the plan view. A right mouse click will close the polygon.

Draw Profile

Draw with the mouse a route in the plan view. A right mouse click will stop the drawing the route and a Profile – Grid Model view will be opened with a profile over the drawn route.

Follow Vessel

If checked, the vessel will be always in the center of the plan view (in 'Follow Vessel' mode).

If unchecked, the vessel can be anywhere in the plan view, even outside the plan view.

The type of 'Follow Vessel' mode can be set in the Properties of the plan view (see page 46).

Orientation Mode

The orientation mode of the plan view. Three options are available: *North Up*, *Heading Up* and *Fixed Skew*.

With *North Up* the plan view is always north up and the vessel will rotate in the plan view.

With *Heading Up* the heading of the vessel is always up, is pointing to the top of the view. All the data will rotate except the vessel.

With *Fixed Skew* the plan view has a fixed orientation. The fixed skew value can be set so that the vessel is always looking up with a fluctuation to the left and right. The orientation of the data in the plan view is steady and the vessel will rotate.

Set Fixed Skew From Heading

Click on this item in the context menu or on the button in the toolbar and the actual heading of the vessel will become the orientation of the plan view. To activate this orientation select as orientation mode *Fixed Skew* and the just selected orientation is fixed.

Interactive Selection

If checked, it is possible to select items in the plan view with the mouse. When active, double click on the color table on the right side to open the color table generator to modify the color table.

Edit Mode

If checked, it is possible to modify the routes and clipping polygons and to add or edit the user maps objects.

Undo

Will reverse the last action done in the edit mode.

Redo

Only active after an *Undo* and will reverse the last undo action of the edit mode.

Layer Control

The overview of the used background and foreground layers in the plan view (see page 48).


Coverage Settings

The settings of the grid model in the plan view (see page 49).

Properties

The Properties of the plan view with some extra settings for the 'Follow Vessel' mode (see below).

5.2.2 Plan View Properties

Click on  in the toolbar or select 'Properties' in the context menu to open the Properties of the plan view.

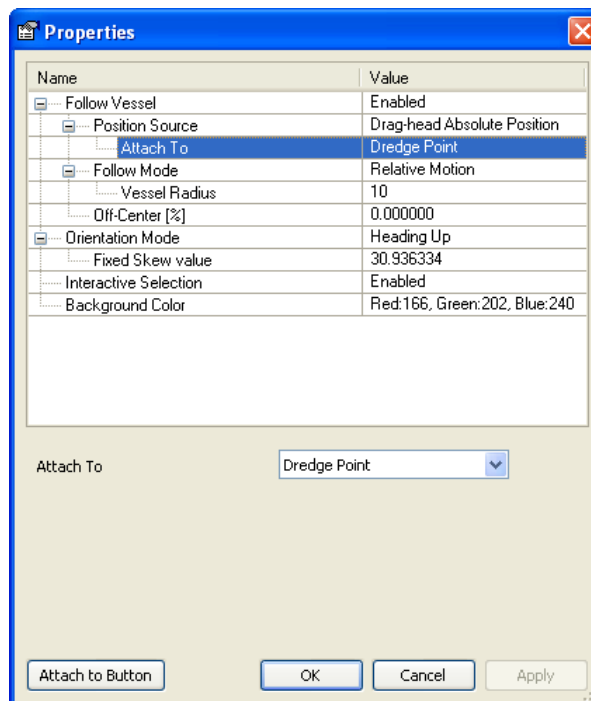


Figure 5-6 The Properties of the Plan View – General Dredge Operation view

The items in the Properties of the plan view are:

Follow Vessel

The 'Follow Vessel' mode can be switched on and off.

Position Source

Any position source or position computation can be selected as 'tracking point' on the vessel for the follow vessel mode.

By default it is set on the *Tracking Point*. If the bottom of the bucket chain has to be followed, select the *Drag-head Absolute Position*.

Attach To

Select *Dredge Point* when as 'Position Source' the computation *Drag-head Absolute Position* is selected.

Follow Mode

The follow mode is by default *Relative Motion*; the vessel is always displayed in the center of the view. Another option for the follow mode is *True Motion*; the vessel will not stay in the center but the view will be updated when the vessel is nearly leaving the view.

Vessel Radius

Vessel radius is the minimum distance from the vessel to the edge of the view.

When the vessel comes in the minimum distance from the edge of the view and the follow mode is set on *True Motion*, the view will be updated and the vessel will be placed in the center of the view.

The vessel radius can also be used in combination with the off-center (see below).

Off-Center

When the follow mode is set on *Relative Motion* the vessel can be displayed out of the center of the view.

This option can be used when the user wants to look forwards for more than a half view. Enter a negative percentage and the vessel will be moved backwards in the view (the data moves with the vessel).

With the vessel radius the distance from the edge of the view can be defined. With a vessel radius of 0 and for the off-center -100% or +100% the vessel is placed on the edge of the view.

Orientation Mode

One of the three modes can be selected; *North Up*, *Heading Up* or *Fixed Skew* (see page 45).

Fixed Skew value

A skew for the plan view can be entered. This is only valid when the orientation mode is set on *Fixed Skew*.


Interactive Selection

The interactive selection (see page 45) can be switched on or off.

Background Color

The background color of the plan view can be modified to any color. The background color is only visible on places where no grid model is displayed.

5.2.3 Plan View Layer Control

Click on  in the plan view toolbar or select 'Layer Control' in the context menu of the plan view to open the Layer Control.

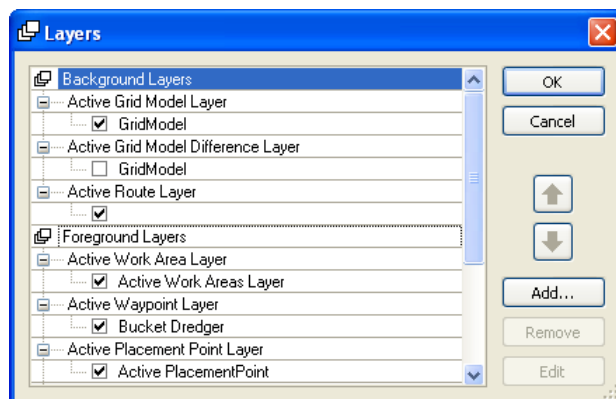



Figure 5-7 Layer Control of the Plan View – General Dredge Operation

The most important layers are the Active Grid Model Layer, the Active Grid Model Difference Layer and the Dredge Layer. These three layers are automatically added to the plan view when the view is created and with the default settings in the layers the grid model or grid model difference and the vessel with the bucket chain will be displayed.


If the user wants to switch between the grid model and grid model difference it can be done via the Layer Control, but this is not advisable. A better way is to use the Coverage Settings option for switching between both models (see page 49).

The only thing what can be modified is the 'Track History Mode; in the Dredge Layer. By default this is set on *Fixed Length* and this can be changed to *Off* or *Fixed Period*. The track history will be displayed behind the vessel so the user can see where the vessel has dredged.

With *Fixed Length* a distance is used and this can be defined with 'Track Buffer Length'. With *Fixed Period* a period is used and this can be defined with 'Time Period'. Only the track data that match with the specification (length or period) will be displayed in the plan view.

The user can add extra layers with  to the list of layers. One of the layers is the Numerics Layer. With this layer items from the computations, like Design Difference or Absolute Z Dredge Head, can be displayed as text in the plan view.

5.2.4 Coverage Settings

Click on  in the plan view toolbar or select 'Coverage Settings' in the context menu of the plan view to open the Coverage Settings.

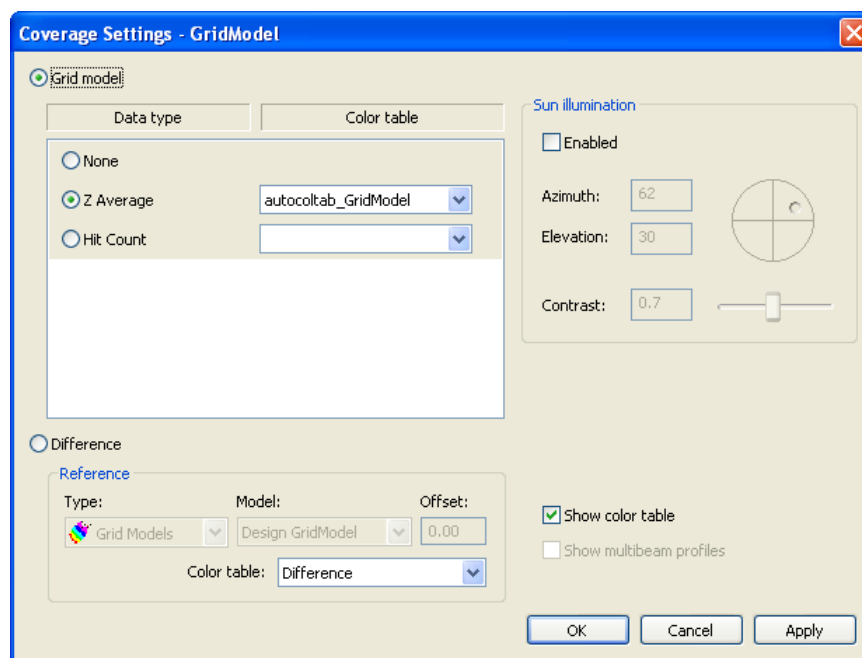


Figure 5-8 Coverage Settings

In the Coverage Settings the user can select if he wants to display the active grid model or the active grid model difference. For the grid model the user can select the data type that has to be displayed. For the data type a color table can be selected.



If a grid model has to be shown in the plan view, check the option 'Grid model' on top of the window. Check under 'Grid Model' the data type and select the right color table for that data type.

If a grid model difference has to be shown in the plan view, check the option 'Difference' and select the right color table. The grid model difference is always the difference between the active grid model and the design model that is selected in the Guidance (see page 38).

With the Coverage Settings it is easy to switch between the active grid model and the active grid model difference in the plan view. Check one of the two options and the settings in the Layers are automatically updated.

Check the option *Show color table* if the user wants to show the color table on the right hand side of the plan view.

With the sun illumination the sun is simulated in a way that on the grid model a shadow becomes visible which makes it clearer to see differences in the depths. Move the yellow dot in the circle to set the azimuth and the elevation for the sun. With the contrast bar the contrast can be set. It is also possible to set all three the parameters manually. Check the option *Enabled* to make the sun illumination active.

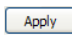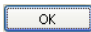The sun illumination will work after the user has clicked on  or . It will take some seconds before the sun illumination is updated. The time it takes for updating depends on the size of the grid model and the computer speed.

5.3 Profile – Realtime Design View

The Profile – Realtime Design view will show the bucket dredger with the bucket chain as a side view with additional information.

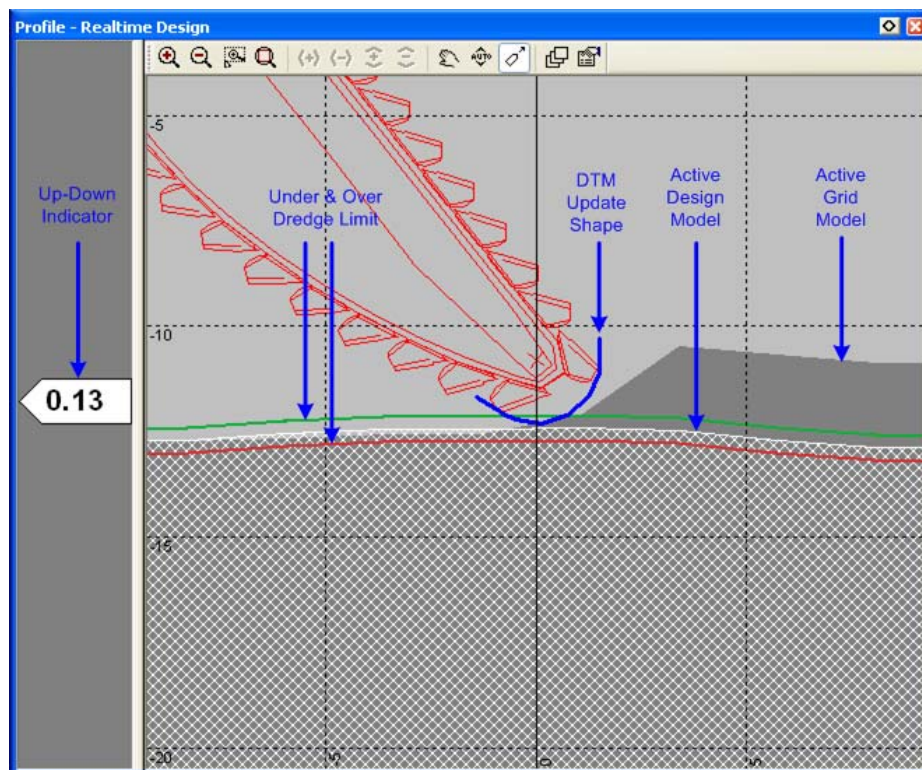





Figure 5-9 Profile – Realtime Design view with a right view of the bucket chain, grid model and design model


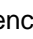
When the bucket chain is not displayed in the profile view then set the view in the Follow Vessel mode. Click on  in the toolbar or select 'Follow Vessel' in the context menu of the profile view to set the Follow Vessel mode on.

The underdredge and overdredge limits have to be specified in the Design Model tab in the Guidance page (see page 38).

The active design model and active grid model are automatically displayed in the view.

The DTM update shape is automatically calculated with the settings as specified in the properties of the Dredge Positioning System (see page 26). The shape displays the dredge area of the bucket chain. With the use of this shape the update for the active grid model is calculated.

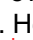For the Up-Down Indicator every item that is available or calculated in PDS2000 can be selected. Here above is for instance the computation  'Design Difference' (in the  Drag-head Absolute Position') displayed. Click with the right mouse button in the Up-Down Indicator area to open the Layer Control of that area. Select in the Up-Down Indicator Layer the item 'Source Item' and select at the bottom the item that has to be displayed (see below).

The computation  'Design Difference' shows the difference between the lowest point of the bucket chain and Z-value of the design model. Another option is to select the computation  'Absolute Z Dredge Head(1)', which shows the absolute depth of the lowest point of the bucket chain. This

value is displayed in the left Profile – Realtime Design view in the example of the Acquisition on page 42.

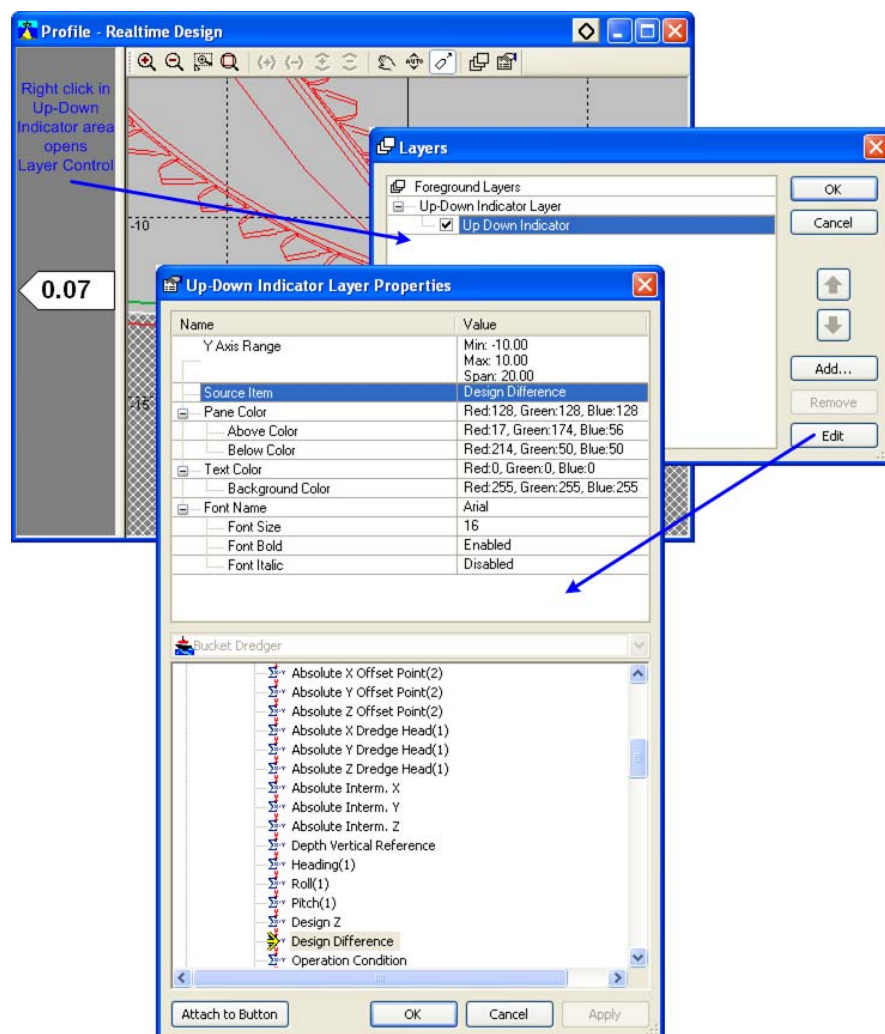


Figure 5-10 Select Source Item for the Up-Down Indicator

5.3.1 Profile Toolbar and Context Menu

In the context menu of the profile view are next to the toolbar buttons some extra items added. Below all the items/buttons will be explained.

The items in the toolbar and the context menu are:

The + and – key of the numerics keyboard can also be used for the Zoom In and Zoom Out.

Zoom Functions (🔍, 🔍, 🔍, 🔍)

Zoom In, Zoom Out, Zoom Window and Zoom Extents. The zoom window will only work when Follow Vessel is off.

Horizontal Zoom In, Horizontal Zoom Out (↔, ↔)

The display can be zoomed in and out only in the horizontal direction of the view. These two options are only available when in the Properties of the profile view the option Scale Mode is set on *Fixed Vertically* or on *Scale Freely* (see page 52).

Vertical Zoom In, Vertical Zoom Out (⬆, ⬆)

The display can be zoomed in and out only in the vertical direction of the view. These two options are only available when in the Properties

of the profile view the option Scale Mode is set on *Fixed Horizontally* or on *Scale Freely* (see page 52).

Pan

Toggles the pan option on/off. When pan is active, keep the left mouse button in and move the mouse to pan through the data.

The pan option can also be switched off by clicking on the right mouse button.

When the pan option is switched on and the Follow Vessel is on then the Follow Vessel will be switched off. The Follow Vessel switches automatically on again when the pan is switched off.

Redraw

Redraw the profile view.

Save Snapshot

A picture of the view can be saved as a JPEG file.

Vertical Auto Ranging

If checked, a vertical zoom extents is active.

Follow Vessel

If checked, the attach point selected in the Properties of the profile view will always be located in the center of the view.


Layer Control

The overview of the used background and foreground layers in the profile view (see page 53). New layers can be added to the used list.

Properties

The Properties of the profile view where some extra settings can be set (see below).

5.3.2 Profile Properties

Click on  in the toolbar or select 'Properties' in the context menu to open the Properties of the profile view.

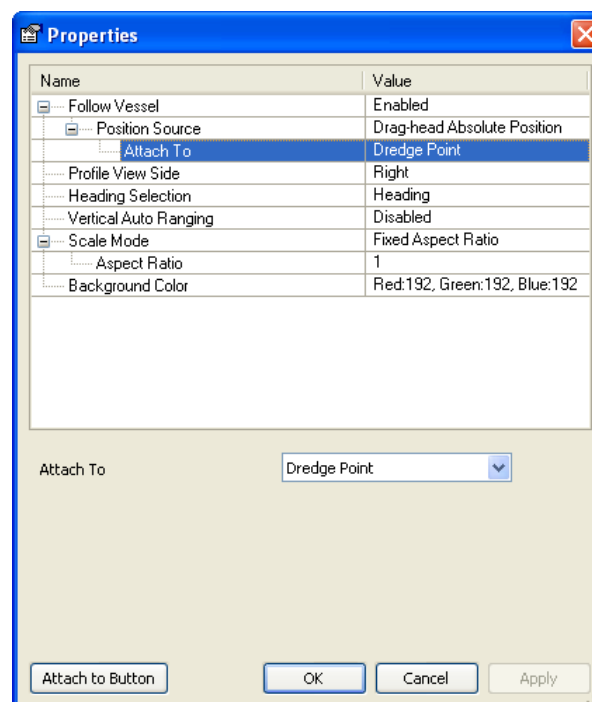


Figure 5-11 Properties of the Profile – Realtime Design view



By default the item 'Position Source' is set on the *Drag-head Absolute Position* and the item 'Attach To' is set on *Dredge Point*. Do not change the setting for the 'Position Source'. For 'Attach To' the user can choose between *Dredge Point* or *Sensor Reference Point*, where with *Dredge Point* the bottom of the bucket chain is followed and with *Sensor Reference Point* the bucket chain point is followed.

When the Profile – Realtime Design view is created the view is always from the *Left*. With the item 'Profile View Side' the view side can be changed to *Right*, *Front* or *Back*. The left Profile – Realtime Design view in the example figure on page 42 is a view from the back. The different view sides have to be made as contours in the Geometry page (see page 22).



The items in the Properties of the profile view will be explained below.

Follow Vessel

If *Enabled*, the selected attach point will always be in the centre of the view.

Position Source

Any position source or position computation can be selected as 'tracking point' on the vessel for the follow vessel mode.



For the Profile – Realtime Design view the position source has to be *Drag-head Absolute Position*.

Attach To

The position source can be attached to the *Dredge Point* or the *Sensor Reference Point*.

Profile View Side

The view side as shown in the profile view, the options are *Left*, *Right*, *Front* and *Back*.

Vertical Auto Ranging

If *Enabled*, a vertical zoom extents will be active.

Scale Mode

The display of the profile view has different scaling options; *Fixed Aspect Ratio*, *Fixed Vertically*, *Fixed Horizontally* and *Scale Freely*.


Aspect Ratio

The ratio between the horizontal and vertical scale used in the profile view. This ratio is used for all the different scale modes.

Background Color

The color of the background can be modified.

5.3.3 Profile Layer Control

Click on  in the profile view toolbar or select 'Layer Control' in the context menu of the view to open the Layer Control.

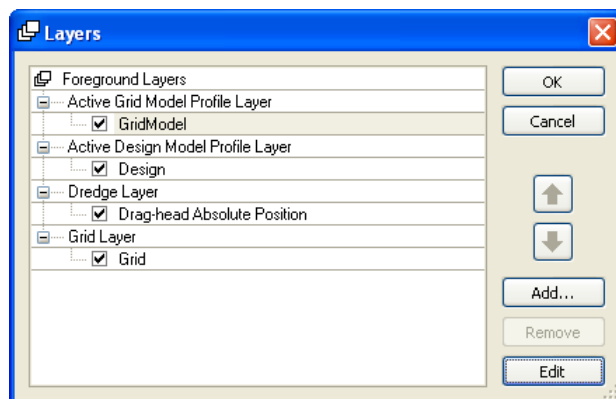



Figure 5-12 Layer Control of the Profile – Realtime Design view

The most important layers are the Active Grid Model Layer, the Active Design Model Layer and the Dredge Layer. These three layers are automatically added to the plan view when the view is created and with the default settings in the layers the grid model, the design model and the vessel with the bucket chain will be displayed.

In the Active Grid Model Layer the color and the hatch style of the grid model in the profile view can be specified.

In the Active Design Model Layer next to the color and the hatch style of the design model also the colors of the underdredge and overdredge limits can be specified.

In the Dredge Layer the color, the line width and the hatch style of the shape of the 'DTM Update', the vessel and the bucket chain can be specified.

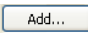The user can add extra layers with  to the list of layers. One of the layers is the Numerics Layer. With this layer items from the computations, like Design Difference or Absolute Z Dredge Head, can be displayed as text in the profile view.

Index

— 3 —

3D Design Model - 10
3D DXF File - 22, 28
3D Model - 38

— A —

Acquisition - 3, 11, 22, 41
Active Design Model - 15
Active Grid Model - 12, 14, 15, 29, 43, 49
Active Grid Model Difference - 49
Advanced Computations - 9, 35
Application Type - 3, 21

— B —

Bottom Bucket Chain Wheel - 5, 7, 19, 24, 27
Bucket Chain - 3, 5, 6, 7, 11, 12, 13, 15, 17, 19, 22, 24, 25, 26, 27, 28, 29, 41, 43, 50
Bucket Chain Point - 5, 7, 17, 19, 20, 24, 25, 27, 53

— C —

C-Map - 44
Color Table - 12, 14, 43, 49
Compass - 5, 8, 25, 32
Context Menu - 12, 13, 14, 17
Contour - 3, 7, 17, 22, 24, 53
Coverage Settings - 12, 14, 43, 46, 49
CRP - 22

— D —

Data Source - 8, 9, 33, 37
Depth Sensor - 5, 8, 9, 25, 30, 33, 37
Design Model - 10, 15, 38, 49, 50, 54
Draught - 8, 33
Dredge Positioning System - 5, 6, 25, 26
DXF File - 24

— E —

Equipment - 5, 25

— F —

Follow Vessel - 12, 43, 45, 46, 50, 51, 52, 53

— G —

Geometry - 3, 5, 7, 8, 17, 22, 25, 27, 28, 30, 33, 34
GeoTIFF File - 44
GPS - 8, 30
Grid Model - 8, 10, 12, 14, 38, 39, 48, 49, 50, 54
Grid Model Difference - 14, 48
Guidance - 10, 15, 38, 50

— I —

Inclinometer - 6, 7, 19, 26, 27

— J —

JPEG File - 44, 52

— L —

Ladder - 19, 20, 26, 27
Ladder Length - 7, 27
Layer Control - 44, 46, 48, 52, 54
Logging - 38

— M —

Measure - 44

— O —

Offset - 5, 7, 8, 22, 25, 27, 30, 33, 34, 38
Overdredge Limit - 10, 15, 50, 54

— P —

Plan View - 11, 12, 13, 14, 41, 43, 46, 48, 49
Plan View – General Dredge Operation - 12, 41, 43
Polygon - 45
Positioning System Geogs - 5, 8, 25, 30
Profile – Realtime Design View - 3, 10, 15, 17, 22, 38, 41, 50, 53
Properties - 13, 17, 46, 52

— R —

Route - 45
RTK - 5, 8, 9, 25, 30, 31, 33, 35



— **S** —

Sea Level - 8, 9, 33, 37
Sun Illumination - 49

— **T** —

Tide Gauge - 5, 8, 9, 25, 30, 31, 35
Tide Station - 9, 35, 37
Top Bucket Chain Wheel - 5, 7, 25, 27
Top View - 3, 12, 22, 43

— **U** —

Underdredge Limit - 10, 15, 50, 54
Up-Down Indicator - 15, 50

— **V** —

Vessel - 3, 5, 8, 21, 22, 25, 32, 33
Vessel Configuration - 3, 21, 22
Vessel Contour - 24
VRU - 5, 8, 25, 28, 32, 33, 35

— **W** —

Wireframe - 22, 28